

SERVICE & OPERATING MANUAL

Original Instructions

Certified Quality



Quality System
ISO 9001 Certified



Environmental Management System
ISO 14001 Certified




Warren Rupp, Inc.
A Unit of IDEX Corporation
800 N. Main St.,
Mansfield, Ohio 44902 USA
Telephone 419.524.8388
Fax 419.522.7867
SANDPIPERPUMP.COM



© Copyright 2015 Warren Rupp, Inc.
All rights reserved

Model S30

Metallic Design Level 1

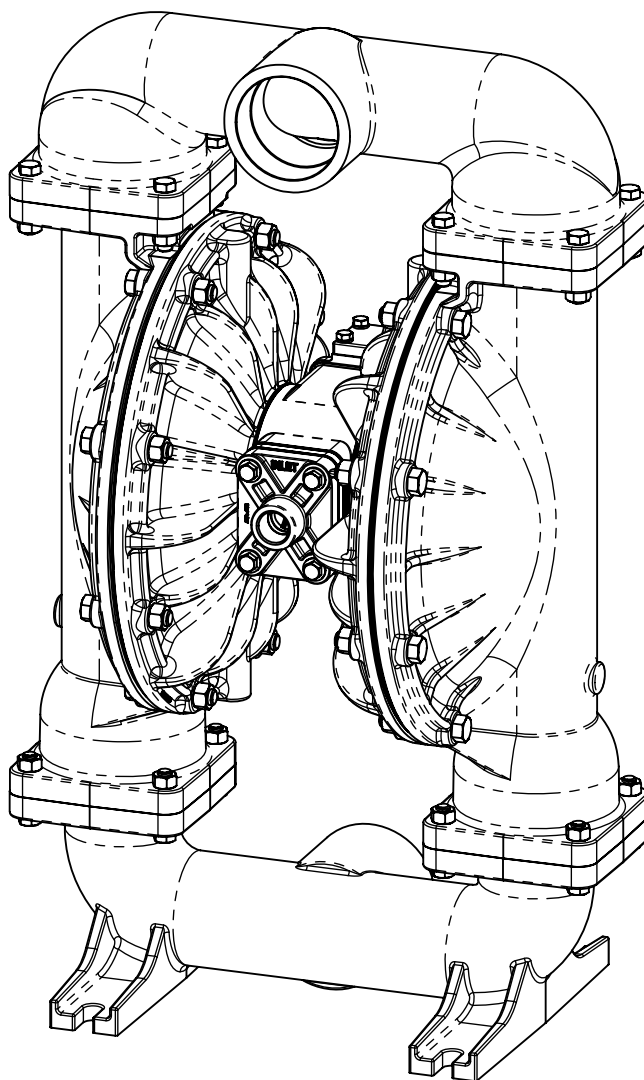

1: PUMP SPECS

2: INSTAL & OP

3: EXP VIEW

4: AIR END

5: WET END

6: OPTIONAL

7: WARRANTY

SANDPIPER®
A WARREN RUPP, INC. BRAND
SANDPIPERPUMP.COM

Safety Information

IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory warranty.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.

CAUTION



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.



WARNING

Pump not designed, tested or certified to be powered by compressed natural gas. Powering the pump with natural gas will void the warranty.

WARNING



When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.




This pump is pressurized internally with air pressure during operation. Make certain that all fasteners are in good condition and are reinstalled properly during reassembly.



Use safe practices when lifting

Grounding ATEX Pumps

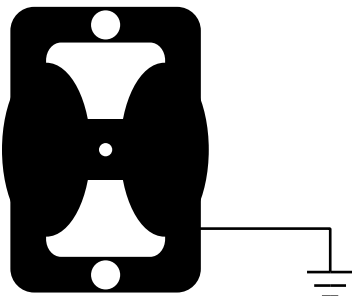

ATEX compliant pumps are suitable for use in explosive atmospheres when the equipment is properly grounded in accordance with local electrical codes. Pumps equipped with electrically conductive diaphragms are suitable for the transfer of conductive or non-conductive fluids of any explosion group. When operating pumps equipped with non-conductive diaphragms that exceed the maximum permissible projected area, as defined in EN 13461-1: 2009 section 6.7.5 table 9, the following protection methods must be applied:

- Equipment is always used to transfer electrically conductive fluids or
- Explosive environment is prevented from entering the internal portions of the pump, i.e. dry running

For further guidance on ATEX applications, please consult the factory.

Table of Contents

SECTION 1: PUMP SPECIFICATIONS.....1

- Explanation of Nomenclature
- Performance
- Materials
- Dimensional Drawings

SECTION 2: INSTALLATION & OPERATION.....5

- Principle of Pump Operation
- Recommended Installation Guide
- Troubleshooting Guide

SECTION 3: EXPLODED VIEW.....8

- Composite Repair Parts Drawing
- Composite Repair Parts List
- Material Codes

SECTION 4: AIR END.....11

- Air Distribution Valve Assembly
- Air Valve with Stroke Indicator Assembly
- Pilot Valve Assembly
- Intermediate Assembly

SECTION 5: WET END17

- Diaphragm Drawings
- Diaphragm Servicing

SECTION 6: OPTIONAL CONFIGURATIONS....19

- Solenoid Shifted Air Valve

SECTION 7: WARRANTY & CERTIFICATES20

- Warranty
- CE Declaration of Conformity - Machinery
- ATEX Declaration of Conformity

1: PUMP SPECS

2: INSTAL & OP

3: EXP VIEW

4: AIR END

5: WET END

6: OPTIONAL

7: WARRANTY

Explanation of Pump Nomenclature

Your Model #: **S**
(fill in from pump nameplate)

| Pump Brand | Pump Size | Check Valve | Design Level | Wetted Material | Diaphragm/Check Valve | Check Valve Seat | Non-Wetted Material | Porting Options | Pump Style | Pump Options | Kit Options |
|-------------------|-----------|-------------|--------------|-----------------|-----------------------|------------------|---------------------|-----------------|------------|--------------|-------------|
| Model #: S | XX | X | X | X | X | X | X | X | X | X | XX |

Pump Brand

S SANDPIPER®

Pump Size

30 3"

Check Valve Type

B Ball

Design Level

1 Design Level

Wetted Material

A Aluminum
I Cast Iron
S Stainless Steel
H Alloy C
X Unpainted Aluminum

Diaphragm/Check Valve Materials

1 Santoprene/Santoprene
2 PTFE-Santoprene/PTFE
B Nitrile/Nitrile
C FKM/PTFE
E EPDM/EPDM
I EPDM/Santoprene
G PTFE-Neoprene/PTFE
M Santoprene/PTFE
N Neoprene/Neoprene

Check Valve Seat

A Aluminum
B Nitrile
C Carbon Steel
E EPDM
N Neoprene
S Stainless Steel
T PTFE
V FKM
W UHMW Polyethylene

Non-Wetted Material Options

A Painted Aluminum
I Cast Iron
J Painted Aluminum w/PTFE Coated Hardware
S Stainless Steel with Stainless Steel Hardware
Y Painted Aluminum with Stainless Steel Hardware
Z Cast Iron with Stainless Steel Hardware

Porting Options

A 150# Raised Face 3" ANSI Flange (Integral Manifold)
D 80 DIN Flange (Integral Manifold)
N NPT Threads
B BSP (Tapered) Threads

Pump Style

S Standard

Pump Options

0 None
6 Metal Muffler

Kit Options

00. None
P0. 10.30VDC Pulse Output Kit
P1. Intrinsically-Safe 5.30VDC, 110/120VAC 220/240 VAC Pulse Output Kit
P2. 110/120 or 220/240VAC Pulse Output Kit
E0. Solenoid Kit with 24VDC Coil
E1. Solenoid Kit with 24VDC Explosion-Proof Coil
E2. Solenoid Kit with 24VAC/12VDC Coil
E3. Solenoid Kit with 12VDC Explosion-Proof Coil
E4. Solenoid Kit with 110VAC Coil

Kit Options (continued)

E5. Solenoid Kit with 110VAC Explosion-Proof Coil
E6. Solenoid Kit with 220VAC Coil
E7. Solenoid Kit with 220VAC Explosion-Proof Coil
E8. Solenoid Kit with 110VAC, 50 Hz Explosion-Proof Coil
E9. Solenoid Kit with 230VAC, 50 Hz Explosion-Proof Coil
SP. Stroke Indicator Pins

A1. Solenoid Kit with 12 VDC ATEX Compliant Coil
A2. Solenoid Kit with 24 VDC ATEX Compliant Coil
A3. Solenoid Kit with 110/120 VAC 50/60 Hz ATEX Compliant Coil
A4. Solenoid Kit with 220/240 VAC 50/60 Hz ATEX Compliant Coil



IEC EEx m T4



Note: Pump models equipped with these explosion-proof solenoid kit options E1, E3, E5, E7, E8 or E9, are certified and approved by the above agencies. They are NOT ATEX compliant.

Your Serial #: (fill in from pump nameplate) _____

ATEX Detail

| | ATEX Detail | Wetted Material Options | Non-Wetted Material Options | Pump Options | Kit Options |
|--|---|-------------------------|-----------------------------|--------------|----------------|
| | II 1G c T5 II 1D c T100°C I M1 c I M2 c | H, I, S | I, S, Z | 6 | 00 |
| | II 2G c T5 II 2D c T100°C | A, H, I, S, X | A, I, S, Y, Z | 6 | 00 |
| | II 2G Ex ia c IIC T5 II 2D Ex c iaD 20 IP67 T100°C | A, H, I, S, X | A, I, S, Y, Z | 6 | P1 |
| | II 2G EEx m c II T5 II 2D c IP65 T100°C | A, H, I, S, X | A, I, S, Y, Z | 6 | A1, A2, A3, A4 |

Performance

S30 METALLIC

SUCTION/DISCHARGE PORT SIZE

- 3" NPT or 3" BSP Tapered
- 3" ANSI Flange or 3" DIN Flange

CAPACITY

- 0 to 235 gallons per minute
(0 to 889 liters per minute)

AIR DISTRIBUTION VALVE

- No-lube, no-stall design

SOLIDS-HANDLING

- Up to .38 in. (9.65mm)

HEADS UP TO

- 125 psi or 289 ft. of water
(8.6 Kg/cm² or 86 meters)

DISPLACEMENT/STROKE

- .94 Gallon / 3.56 liter

MAXIMUM OPERATING PRESSURE


- 125 psi (8.6 bar)

SHIPPING WEIGHT

- Aluminum 116 lbs. (53kg)
- Cast Iron 215 lbs. (98kg)
- Stainless Steel 194 lbs. (87kg)

MODEL S30 Metallic Performance Curve

Performance based on the following: elastomer fitted pump, flooded suction, water at ambient conditions.
The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.

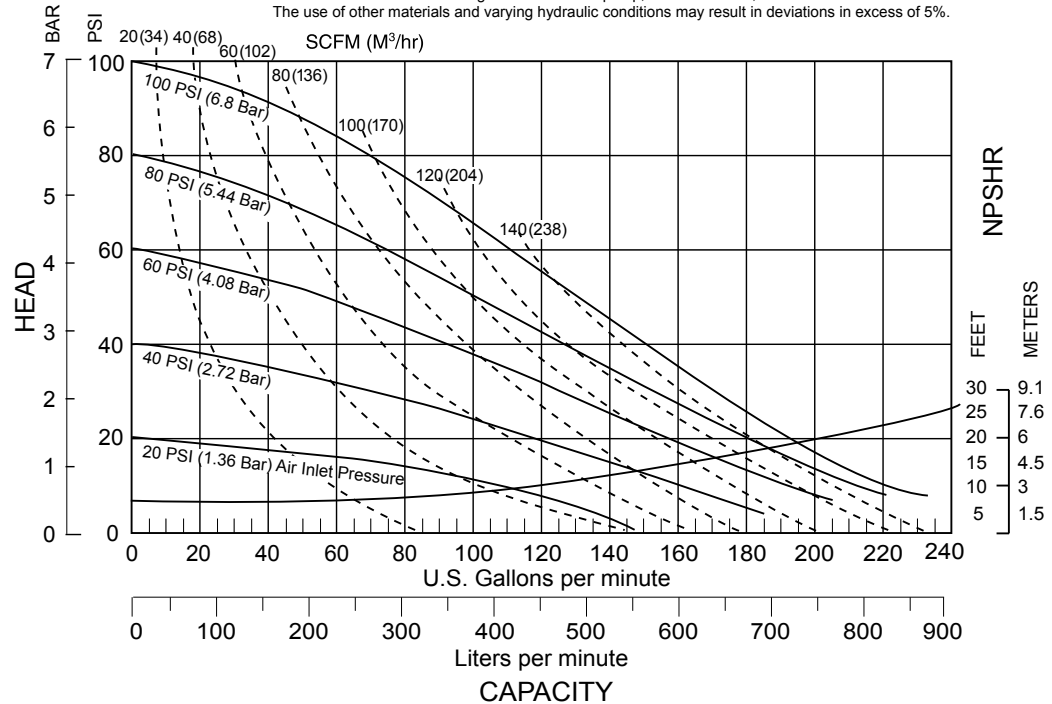

Materials

| Material Profile: | Operating Temperatures: | |
|---|-------------------------|----------------|
| | Max. | Min. |
| CAUTION! Operating temperature limitations are as follows: | | |
| Conductive Acetal: Tough, impact resistant, ductile. Good abrasion resistance and low friction surface. Generally inert, with good chemical resistance except for strong acids and oxidizing agents. | 190°F 88°C | -20°F -29°C |
| EPDM: Shows very good water and chemical resistance. Has poor resistance to oils and solvents, but is fair in ketones and alcohols. | 280°F 138°C | -40°F -40°C |
| FKM: (Fluorocarbon) Shows good resistance to a wide range of oils and solvents; especially all aliphatic, aromatic and halogenated hydrocarbons, acids, animal and vegetable oils. Hot water or hot aqueous solutions (over 70°F(21°C)) will attack FKM. | 350°F 177°C | -40°F -40°C |
| Hytrel®: Good on acids, bases, amines and glycols at room temperatures only. | 220°F 104°C | -20°F -29°C |
| Neoprene: All purpose. Resistance to vegetable oils. Generally not affected by moderate chemicals, fats, greases and many oils and solvents. Generally attacked by strong oxidizing acids, ketones, esters and nitro hydrocarbons and chlorinated aromatic hydrocarbons. | 200°F 93°C | -10°F -23°C |
| Nitrile: General purpose, oil-resistant. Shows good solvent, oil, water and hydraulic fluid resistance. Should not be used with highly polar solvents like acetone and MEK, ozone, chlorinated hydrocarbons and nitro hydrocarbons. | 190°F 88°C | -10°F -23°C |
| Nylon: 6/6 High strength and toughness over a wide temperature range. Moderate to good resistance to fuels, oils and chemicals. | 180°F 82°C | 32°F 0°C |

Ambient temperature range: -20°C to +40°C

Process temperature range: -20°C to +80°C for models rated as category 1 equipment

-20°C to +100°C for models rated as category 2 equipment

In addition, the ambient temperature range and the process temperature range do not exceed the operating temperature range of the applied non-metallic parts as listed in the manuals of the pumps.

| | | |
|--|----------------|----------------|
| Polypropylene: A thermoplastic polymer. Moderate tensile and flex strength. Resists strong acids and alkali. Attacked by chlorine, fuming nitric acid and other strong oxidizing agents. | 180°F 82°C | 32°F 0°C |
| PVDF: (Polyvinylidene Fluoride) A durable fluoroplastic with excellent chemical resistance. Excellent for UV applications. High tensile strength and impact resistance. | 250°F 121°C | 0°F -18°C |
| Santoprene®: Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance. | 275°F 135°C | -40°F -40°C |
| UHMW PE: A thermoplastic that is highly resistant to a broad range of chemicals. Exhibits outstanding abrasion and impact resistance, along with environmental stress-cracking resistance. | 180°F 82°C | -35°F -37°C |
| Urethane: Shows good resistance to abrasives. Has poor resistance to most solvents and oils. | 150°F 66°C | 32°F 0°C |
| Virgin PTFE: (PFA/TFE) Chemically inert, virtually impervious. Very few chemicals are known to chemically react with PTFE; molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures. | 220°F 104°C | -35°F -37°C |

Maximum and Minimum Temperatures are the limits for which these materials can be operated. Temperatures coupled with pressure affect the longevity of diaphragm pump components. Maximum life should not be expected at the extreme limits of the temperature ranges.

Metals:

Alloy C: Equal to ASTM494 CW-12M-1 specification for nickel and nickel alloy.




Stainless Steel: Equal to or exceeding ASTM specification A743 CF-8M for corrosion resistant iron chromium, iron chromium nickel and nickel based alloy castings for general applications. Commonly referred to as 316 Stainless Steel in the pump industry.

For specific applications, always consult the Chemical Resistance Chart.

Dimensional Drawings

S30 Metallic, Flanged Ports

Dimensional Tolerance:±1/8" Dimensional Tolerance:± 3mm

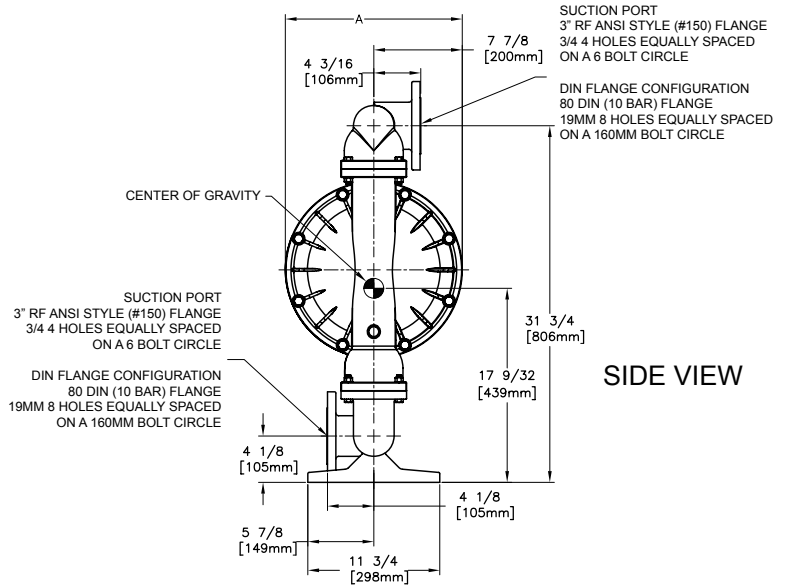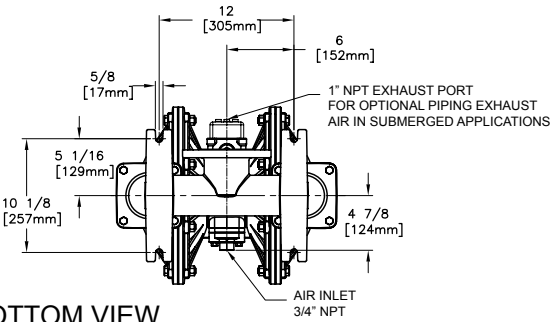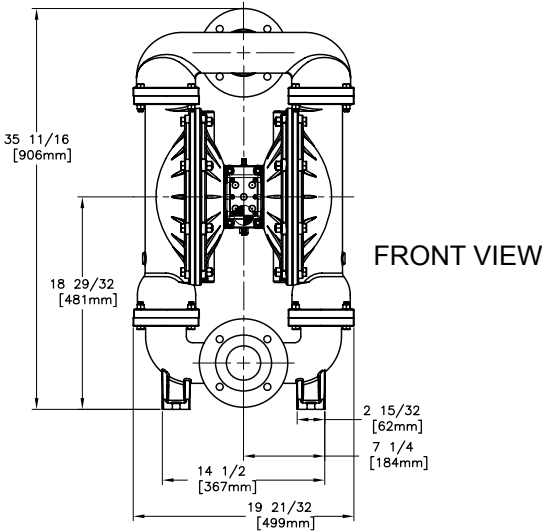



| DIMENSION | A |
|-------------------------|-------------------|
| STANDARD PUMP | 15 3/4 / (400MM) |
| PULSE OUTPUT | 16 1/32 / (407MM) |
| METAL MUFFLER | 16 3/4 / (429MM) |
| MESH MUFFLER | 17 3/16 / (441MM) |
| SOUND DAMPENING MUFFLER | 17 3/16 / (441MM) |

PUMP WEIGHT: 273 lbs

Dimensional Drawings

S30 Metallic, Threaded Ports



Dimensions in Inches. Dimensional Tolerance: $\pm 1/8"$

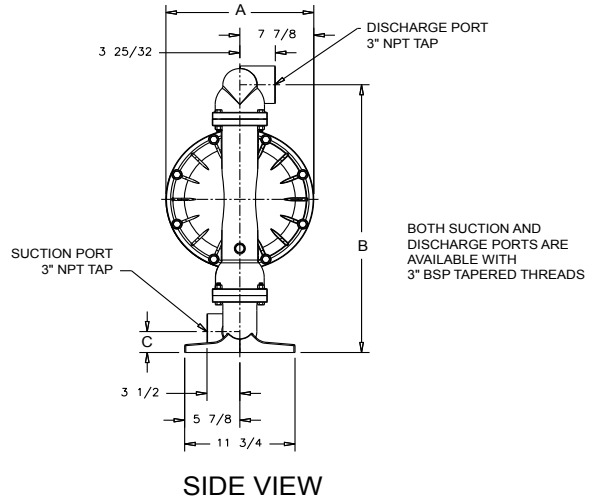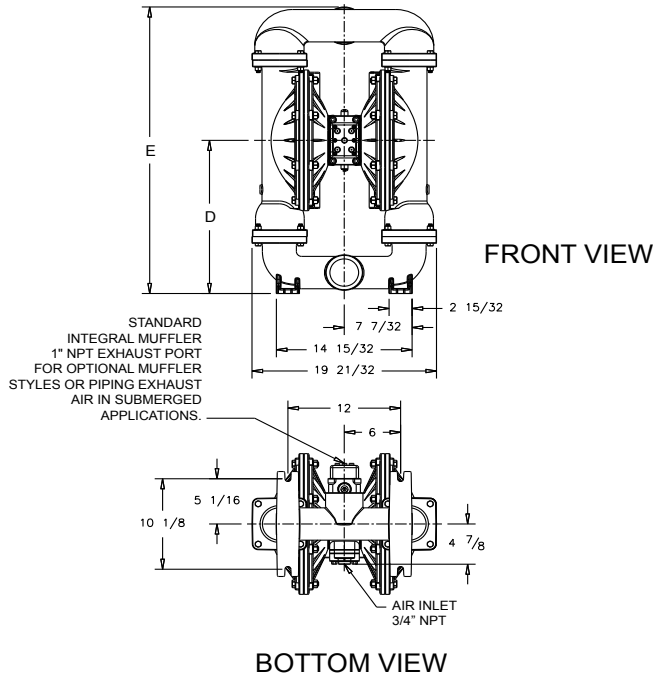

| DIMENSION | A | B | C | D | E |
|-------------------------|----------|---------|----------|---------|---|
| Integral Muffler | 15 3/4 | | | | |
| Pulse Output Kit | 15 3/4 | | | | |
| Aluminum | 29 31/32 | 2 11/32 | 17 9/64 | 32 1/16 | |
| Stainless Steel | 30 3/16 | 2 9/16 | 17 23/64 | 32 9/32 | |
| Mesh Muffler | 17 3/16 | | | | |
| Sound Dampening Muffler | 17 3/16 | | | | |
| Metal Muffler | 16 3/4 | | | | |


S30 Metallic, Threaded Ports

Dimensions in Millimeters. Dimensional Tolerance: $\pm 3\text{mm}$

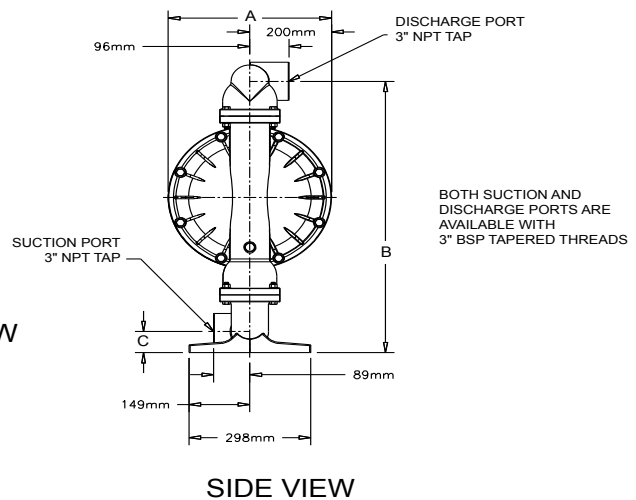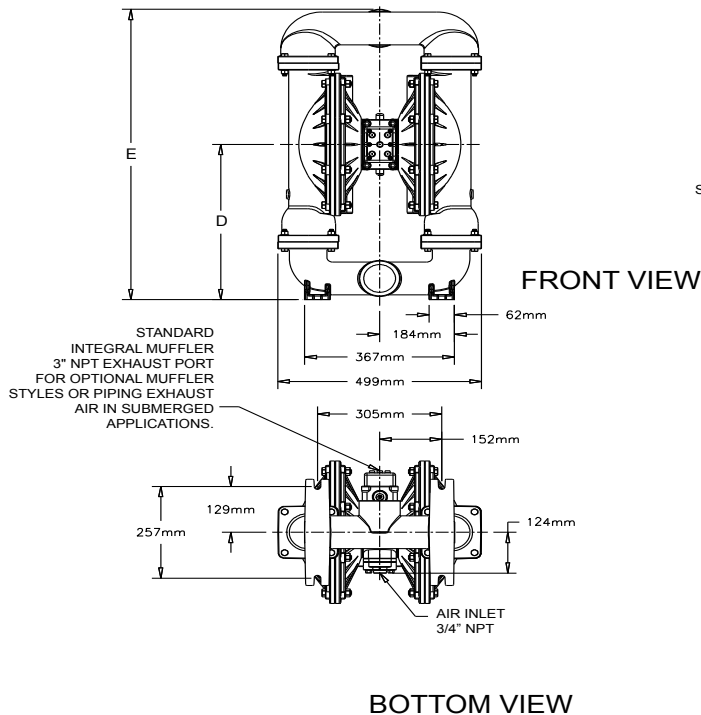

| DIMENSION | A | B | C | D | E |
|-------------------------|-----|-----|----|-----|-----|
| Integral Muffler | 400 | | | | |
| Pulse Output Kit | 400 | | | | |
| Aluminum | | 761 | 60 | 435 | 815 |
| Stainless Steel | | 767 | 66 | 441 | 821 |
| Mesh Muffler | 437 | | | | |
| Sound Dampening Muffler | 437 | | | | |
| Metal Muffler | 425 | | | | |

Principle of Pump Operation

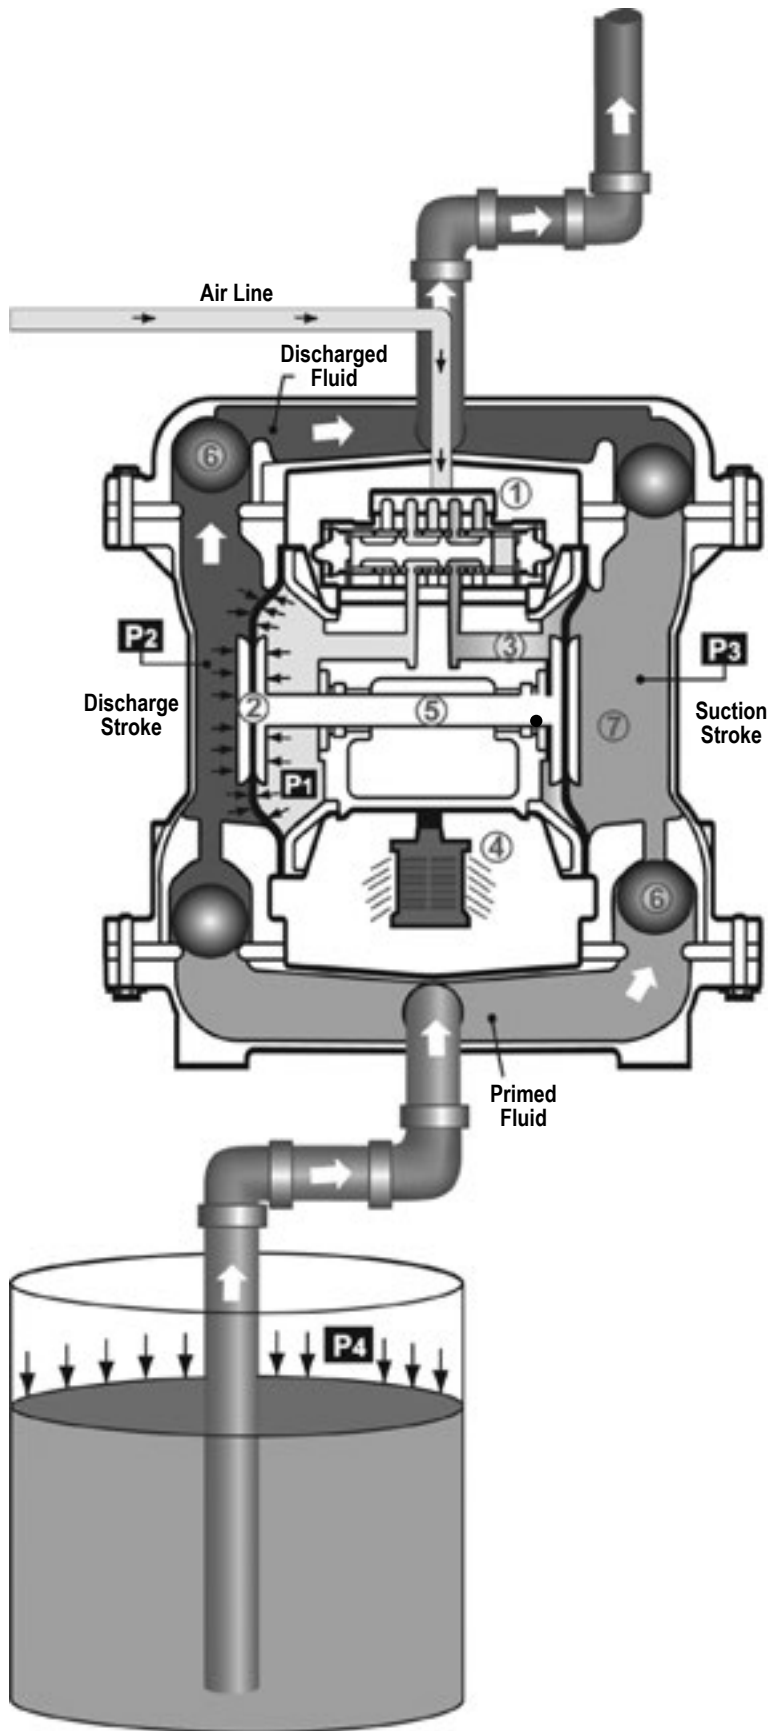

Air-Operated Double Diaphragm (AODD) pumps are powered by compressed air or nitrogen.


The main directional (air) control valve ① distributes compressed air to an air chamber, exerting uniform pressure over the inner surface of the diaphragm ②. At the same time, the exhausting air ③ from behind the opposite diaphragm is directed through the air valve assembly(s) to an exhaust port ④.

As inner chamber pressure (**P1**) exceeds liquid chamber pressure (**P2**), the rod ⑤ connected diaphragms shift together creating discharge on one side and suction on the opposite side. The discharged and primed liquid's directions are controlled by the check valves (ball or flap)⑥ orientation.

The pump primes as a result of the suction stroke. The suction stroke lowers the chamber pressure (**P3**) increasing the chamber volume. This results in a pressure differential necessary for atmospheric pressure (**P4**) to push the fluid through the suction piping and across the suction side check valve and into the outer fluid chamber ⑦.

Suction (side) stroking also initiates the reciprocating (shifting, stroking or cycling) action of the pump. The suction diaphragm's movement is mechanically pulled through its stroke. The diaphragm's inner plate makes contact with an actuator plunger aligned to shift the pilot signaling valve. Once actuated, the pilot valve sends a pressure signal to the opposite end of the main directional air valve, redirecting the compressed air to the opposite inner chamber.

SUBMERGED ILLUSTRATION

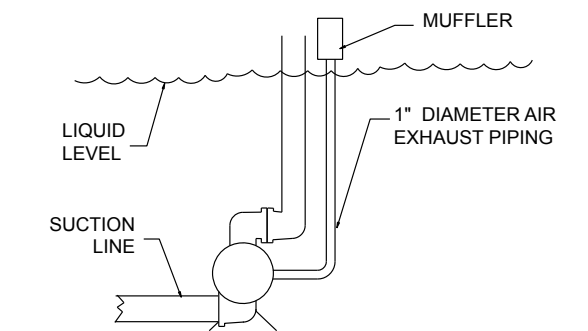


Pump can be submerged if the pump materials of construction are compatible with the liquid being pumped. The air exhaust must be piped above the liquid level. When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills.

Recommended Installation Guide

Available Accessories:

1. Surge Suppressor
2. Filter/Regulator
3. Air Dryer

Note: Surge Suppressor and Piping must be supported after the flexible connection

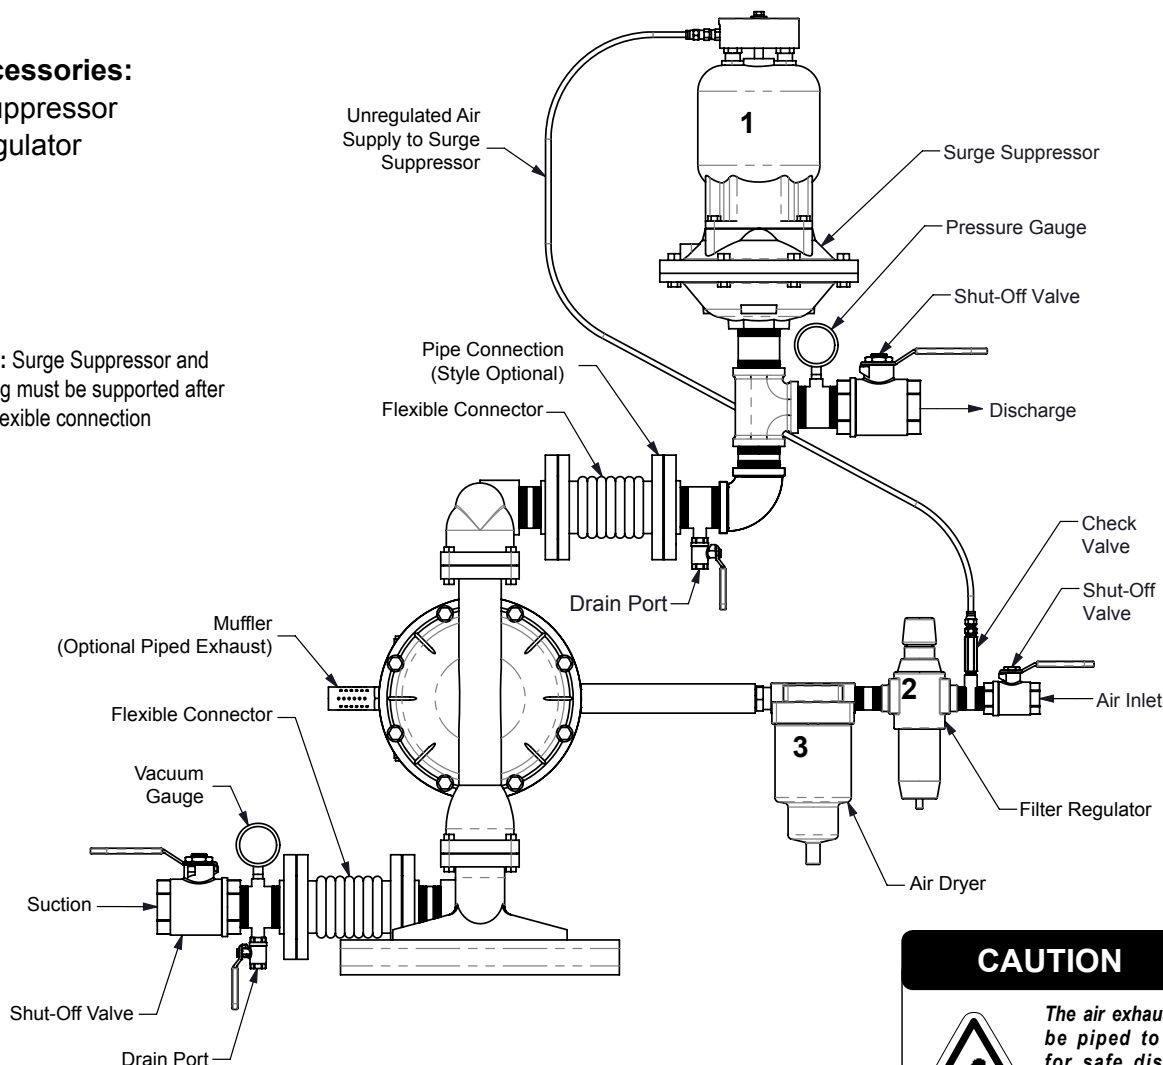

CAUTION



The air exhaust should be piped to an area for safe disposition of the product being pumped, in the event of a diaphragm failure.

Installation And Start-Up

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

Air Supply

Connect the pump air inlet to an air supply with sufficient capacity and pressure to achieve desired performance. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

Air Valve Lubrication

The air distribution system is designed to operate WITHOUT lubrication. This is the standard mode of operation. If lubrication is desired, install an air line lubricator set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes. Consult the Performance Curve to determine air consumption.

Air Line Moisture

Water in the compressed air supply may cause icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer.

Air Inlet And Priming


To start the pump, slightly open the air shut-off valve. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.

Troubleshooting Guide

| Symptom: | Potential Cause(s): | Recommendation(s): |
|--|---|--|
| Pump Cycles Once | Deadhead (system pressure meets or exceeds air supply pressure). | Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units). |
| | Air valve or intermediate gaskets installed incorrectly. | Install gaskets with holes properly aligned. |
| | Bent or missing actuator plunger. | Remove pilot valve and inspect actuator plungers. |
| Pump Will Not Operate / Cycle | Pump is over lubricated. | Set lubricator on lowest possible setting or remove. Units are designed for lube free operation. |
| | Lack of air (line size, PSI, CFM). | Check the air line size and length, compressor capacity (HP vs. CFM required). |
| | Check air distribution system. | Disassemble and inspect main air distribution valve, pilot valve and pilot valve actuators. |
| | Discharge line is blocked or clogged manifolds. | Check for inadvertently closed discharge line valves. Clean discharge manifolds/piping. |
| | Deadhead (system pressure meets or exceeds air supply pressure). | Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units). |
| | Blocked air exhaust muffler. | Remove muffler screen, clean or de-ice, and re-install. |
| | Pumped fluid in air exhaust muffler. | Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly. |
| | Pump chamber is blocked. | Disassemble and inspect wetted chambers. Remove or flush any obstructions. |
| Pump Cycles and Will Not Prime or No Flow | Cavitation on suction side. | Check suction condition (move pump closer to product). |
| | Check valve obstructed. Valve ball(s) not seating properly or sticking. | Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Clean out around valve ball cage and valve seat area. Replace valve ball or valve seat if damaged. Use heavier valve ball material. |
| | Valve ball(s) missing (pushed into chamber or manifold). | Worn valve ball or valve seat. Worn fingers in valve ball cage (replace part). Check Chemical Resistance Guide for compatibility. |
| | Valve ball(s) / seat(s) damaged or attacked by product. | Check Chemical Resistance Guide for compatibility. |
| | Check valve and/or seat is worn or needs adjusting. | Inspect check valves and seats for wear and proper setting. Replace if necessary. |
| | Suction line is blocked. | Remove or flush obstruction. Check and clear all suction screens or strainers. |
| | Excessive suction lift. | For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases. |
| | Suction side air leakage or air in product. | Visually inspect all suction-side gaskets and pipe connections. |
| | Pumped fluid in air exhaust muffler. | Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly. |
| Pump Cycles Running Sluggish / Stalling, Flow Unsatisfactory | Over lubrication. | Set lubricator on lowest possible setting or remove. Units are designed for lube free operation. |
| | Icing. | Remove muffler screen, de-ice, and re-install. Install a point of use air drier. |
| | Clogged manifolds. | Clean manifolds to allow proper air flow. |
| | Deadhead (system pressure meets or exceeds air supply pressure). | Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units). |
| | Cavitation on suction side. | Check suction (move pump closer to product). |
| | Lack of air (line size, PSI, CFM). | Check the air line size, length, compressor capacity. |
| | Excessive suction lift. | For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases. |
| | Air supply pressure or volume exceeds system hd. | Decrease inlet air (press. and vol.) to the pump. Pump is cavitating the fluid by fast cycling. |
| | Undersized suction line. | Meet or exceed pump connections. |
| | Restrictive or undersized air line. | Install a larger air line and connection. |
| | Suction side air leakage or air in product. | Visually inspect all suction-side gaskets and pipe connections. |
| | Suction line is blocked. | Remove or flush obstruction. Check and clear all suction screens or strainers. |
| | Pumped fluid in air exhaust muffler. | Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly. |
| | Check valve obstructed. | Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. |
| | Check valve and/or seat is worn or needs adjusting. | Inspect check valves and seats for wear and proper setting. Replace if necessary. |
| | Entrained air or vapor lock in chamber(s). | Purge chambers through tapped chamber vent plugs. Purging the chambers of air can be dangerous. |
| Product Leaking Through Exhaust | Diaphragm failure, or diaphragm plates loose. | Replace diaphragms, check for damage and ensure diaphragm plates are tight. |
| | Diaphragm stretched around center hole or bolt holes. | Check for excessive inlet pressure or air pressure. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication. |
| Premature Diaphragm Failure | Cavitation. | Enlarge pipe diameter on suction side of pump. |
| | Excessive flooded suction pressure. | Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener. |
| | Misapplication (chemical/physical incompatibility). | Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication. |
| | Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn. | Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge. |
| Unbalanced Cycling | Excessive suction lift. | For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases. |
| | Undersized suction line. | Meet or exceed pump connections. |
| | Pumped fluid in air exhaust muffler. | Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly. |
| | Suction side air leakage or air in product. | Visually inspect all suction-side gaskets and pipe connections. |
| | Check valve obstructed. | Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. |
| | Check valve and/or seat is worn or needs adjusting. | Inspect check valves and seats for wear and proper setting. Replace if necessary. |
| | Entrained air or vapor lock in chamber(s). | Purge chambers through tapped chamber vent plugs. |

For additional troubleshooting tips contact After Sales Support at service.warrenrupp@idexcorp.com or 419-524-8388

Composite Repair Parts Drawing

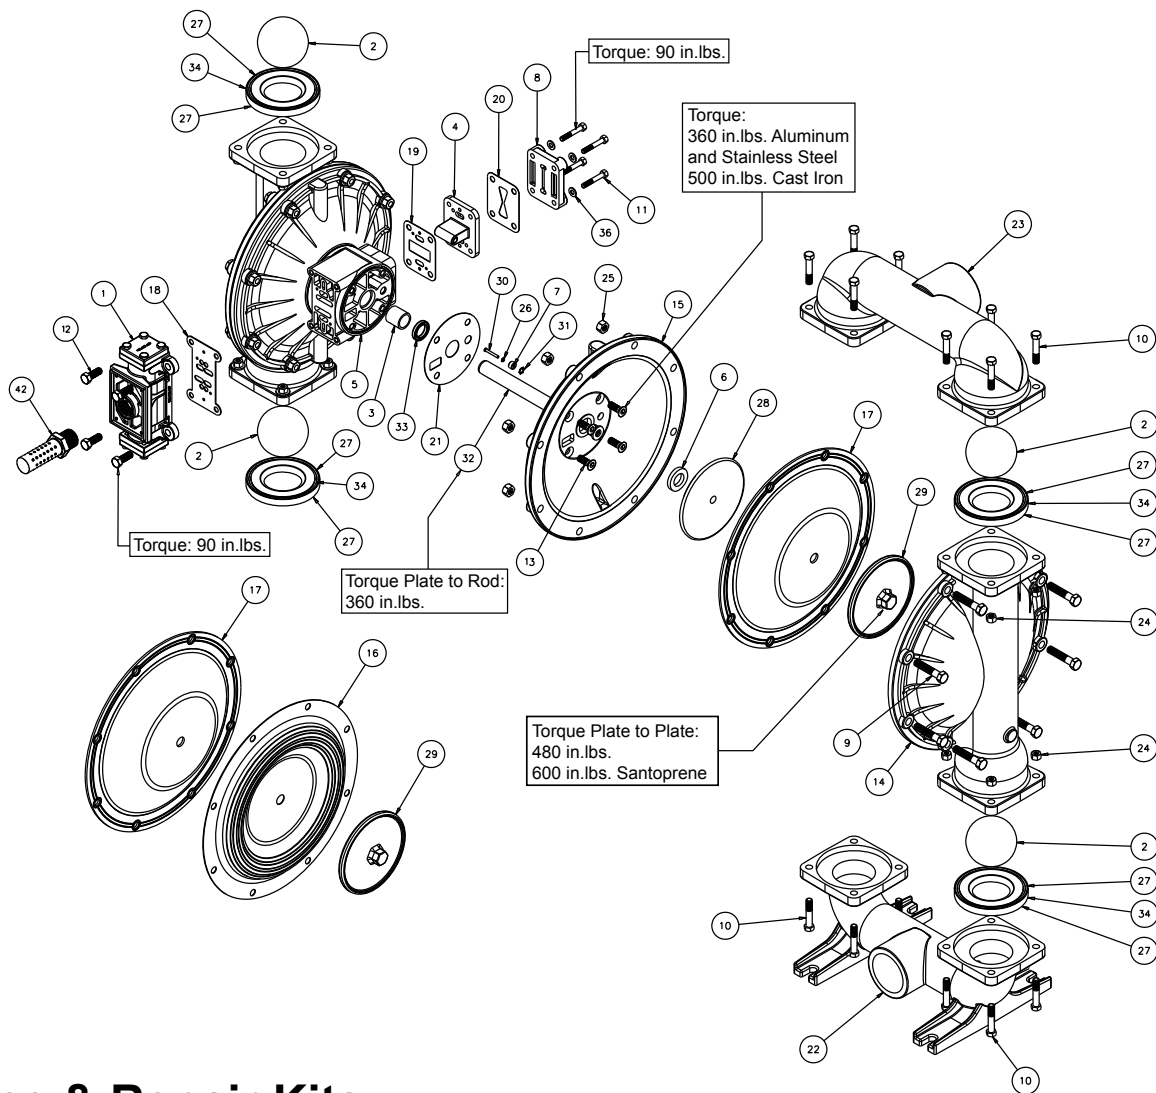

3: EXP VIEW

Service & Repair Kits

- 476-227-000 Air End Kit (Aluminum Center)**
Air Valve Assembly, Pilot Valve Assembly, Seals, O-Rings, Gaskets, Plungers.
- **476-170-000 Air End Kit** (Air Valve with Stroke Indicator Pin, Aluminum Center) Seals, O-Ring, Gaskets, Retaining Rings, Air Valve Sleeve and Spool Set, and Pilot Valve Assembly.
- 476-171-360 Wet End Kit**
Nitrile Diaphragms, Balls, and Seats.
- 476-171-656 Wet End Kit**
Santoprene Diaphragms, Balls and EPDM Seats.
- 476-171-364 Wet End Kit**
EPDM Diaphragms, Balls and Seats.
- 476-171-365 Wet End Kit**
Neoprene Diaphragms, Balls, and Seats.
- 476-171-633 Wet End Kit**
FKM Diaphragms, PTFE Balls and PTFE Seats.
- 476-171-635 Wet End Kit**
Neoprene Diaphragms, PTFE Overlay, PTFE Balls and PTFE Seats.

- 476-171-644 Wet End Kit**
Santoprene Diaphragms, PTFE Balls and PTFE Seats
- 476-171-654 Wet End Kit**
Santoprene Diaphragms, PTFE Overlays, PTFE Balls, PTFE Seats.
- 475-217-000 Micsection Conversion Kit**
(Replaces Aluminum Midsection with Cast Iron Components) Air Inlet Cap, Intermediate Bracket, Inner Chambers, and Inner Diaphragm Plates.

Hardware Kits

- 475-197-330 Zinc Plated Capscrews, Washers, and Hex Nuts.
475-197-115 Stainless Steel Capscrews, Washers, and Hex Nuts.

**Electronic Leak Detector Kits

- 032-040-000 110VAC
032-037-000 220VAC

****Note:** Pumps equipped with these components are not ATEX compliant

Composite Repair Parts List

| Item | Part Number | Description | Qty | Item | Part Number | Description | Qty |
|------|---------------|---|-----|------|---------------|------------------------------------|-----|
| ① | ▲ 031-146-000 | Air Valve Assembly | 1 | | 518-143-112 | Manifold, Suction | 1 |
| | ▲ 031-147-000 | Air Valve Assembly | 1 | | 518-143-112E | Manifold, Suction 3" BSP Tapered | 1 |
| | 031-173-000 | Air Valve Assembly | 1 | | 518-171-010 | Manifold, ANSI Flange Suction | 1 |
| | 031-173-001 | Air Valve Assembly (with Stainless Steel Hardware) | 1 | | 518-171-010E | Manifold, DIN Flange Suction | 1 |
| | ▲ 031-183-000 | Air Valve Assembly (with Stainless Steel Hardware) | 1 | | 518-171-110 | Manifold, ANSI Flange Suction | 1 |
| | ▲ 031-179-000 | Air Valve Assembly (Cast Iron and Stainless Steel Centers) | 1 | | 518-171-110E | Manifold, DIN Flange Suction | 1 |
| | 031-140-000 | Air Valve Assembly w/Integral muffler (Cast Iron Centers Only) | 1 | 23 | 518-171-156 | Manifold, ANSI Flange Suction | 1 |
| | 031-141-000 | Air Valve Assembly (Cast Iron Centers Only) | 1 | | 518-171-156E | Manifold, DIN Flange Suction | 1 |
| 2 | 050-014-354 | Ball, Check | 4 | | 518-144-010 | Manifold, Discharge | 1 |
| | 050-014-360 | Ball, Check | 4 | | 518-144-010E | Manifold, Discharge 3" BSP Tapered | 1 |
| | 050-014-364W | Ball, Check | 4 | | 518-144-110 | Manifold, Discharge | 1 |
| | 050-014-365 | Ball, Check | 4 | | 518-144-110E | Manifold, Discharge 3" BSP Tapered | 1 |
| | 050-015-600 | Ball, Check | 4 | | 518-144-112 | Manifold, Discharge | 1 |
| 3 | 070-006-170 | Bushing | 2 | | 518-144-112E | Manifold, Discharge 3" BSP Tapered | 1 |
| 4 | 095-110-000 | Pilot Valve Assembly | 1 | | 518-144-156 | Manifold, Discharge | 1 |
| | 095-110-558 | Pilot Valve Assembly (Cast Iron Centers Only) | 1 | | 518-144-156E | Manifold, Discharge 3" BSP Tapered | 1 |
| | 095-110-110 | Pilot Valve Assembly (Cast Iron Centers Only) | 1 | | 518-172-010 | Manifold, ANSI Flange Discharge | 1 |
| 5 | 114-024-157 | Intermediate Bracket | 1 | | 518-172-010E | Manifold, DIN Flange Discharge | 1 |
| | 114-024-010 | Intermediate Bracket | 1 | | 518-172-110 | Manifold, ANSI Flange Discharge | 1 |
| | 114-024-110 | Intermediate Bracket | 1 | | 518-172-110E | Manifold, DIN Flange Discharge | 1 |
| 6 | 132-035-360 | Bumper, Diaphragm | 2 | | 518-172-156 | Manifold, ANSI Flange Discharge | 1 |
| 7 | 135-034-506 | Bushing, Plunger | 2 | | 518-172-156E | Manifold, DIN Flange Discharge | 1 |
| 8 | 165-113-157 | Cap, Air Inlet Assembly | 1 | 24 | 545-007-115 | Nut, Hex 7/16-14 | 16 |
| | 165-113-010 | Cap, Air Inlet Assembly | 1 | | 545-007-330 | Nut, Hex 7/16-14 | 16 |
| | 165-113-110 | Cap, Air Inlet Assembly | 1 | | 545-008-115 | Nut, Hex 1/2-13 | 16 |
| 9 | 170-055-115 | Capscrew, Hex Hd 1/2-13 X 2.50 | 16 | | 545-008-330 | Nut, Hex 1/2-13 | 16 |
| | 170-055-330 | Capscrew, Hex Hd 1/2-13 X 2.50 | 16 | 26 | 560-001-360 | O-Ring | 2 |
| 10 | 170-060-115 | Capscrew, Hex Hd 7/16-14 X 2.00 | 16 | 27 | 560-105-360 | Seal (O-Ring) (See item 34) | 8 |
| | 170-060-330 | Capscrew, Hex Hd 7/16-14 X 2.00 | 16 | | 560-105-363 | Seal (O-Ring) (See item 34) | 8 |
| 11 | 170-069-115 | Capscrew, Hex Hd 5/16-18 X 1.75 | 4 | | 560-105-364 | Seal (O-Ring) (See item 34) | 8 |
| | 170-069-330 | Capscrew, Hex Hd 5/16-18 X 1.75 | 4 | | 560-105-365 | Seal (O-Ring) (See item 34) | 8 |
| 12 | 171-053-115 | Capscrew, Soc Hd 3/8-16 X 2.50 (Stroke Indicator Only) | 4 | | 720-055-608 | Seal (O-Ring) (See item 34) | 8 |
| | 171-053-330 | Capscrew, Soc Hd 3/8-16 X 2.50 (Stroke Indicator Only) | 4 | 28 | 612-192-157 | Plate, Inner Diaphragm Assembly | 2 |
| | 170-006-115 | Capscrew, Hex HD 3/8-16 X 1.00 | 4 | | 612-192-010 | Plate, Inner Diaphragm Assembly | 2 |
| | 170-006-330 | Capscrew, Hex HD 3/8-16 X 1.00 | 4 | 29 | 612-194-157 | Plate, Outer Diaphragm Assembly | 2 |
| 13 | 171-059-115 | Capscrew, Soc Hd 7/16-14 X 1.25 | 8 | | 612-194-010 | Plate, Outer Diaphragm Assembly | 2 |
| | 171-059-330 | Capscrew, Soc Hd 7/16-14 X 1.25 | 8 | | 612-194-110 | Plate, Outer Diaphragm Assembly | 2 |
| | 171-011-115 | Capscrew, Soc Hd 1/2-13 X 1.00 (Stainless Center) | 8 | | 612-194-112 | Plate, Outer Diaphragm Assembly | 2 |
| 14 | 196-164-156 | Chamber, Outer | 2 | 30 | 620-020-115 | Plunger, Actuator | 2 |
| | 196-164-015 | Chamber, Outer | 2 | 31 | 675-042-115 | Ring, Retaining | 2 |
| | 196-164-110 | Chamber, Outer | 2 | 32 | 685-040-120 | Rod, Diaphragm | 1 |
| | 196-164-112 | Chamber, Outer | 2 | 33 | 720-004-360 | Seal, Diaphragm Rod | 2 |
| 15 | 196-165-156 | Chamber, Inner | 2 | 34 | 722-090-360 | Seat, Check Ball | 4 |
| | 196-165-157 | Chamber, Inner | 2 | | 722-090-363 | Seat, Check Ball | 4 |
| | 196-165-010 | Chamber, Inner | 2 | | 722-090-364 | Seat, Check Ball | 4 |
| | 196-165-110 | Chamber, Inner | 2 | | 722-090-365 | Seat, Check Ball | 4 |
| 16 | 286-098-604 | Diaphragm, Overlay | 2 | | 722-090-550 | Seat, Check Ball | 4 |
| 17 | 286-098-360 | Diaphragm | 2 | | 722-090-600 | Seat, Check Ball | 4 |
| | 286-098-363 | Diaphragm | 2 | | 722-090-080 | Seat, Check Ball | 4 |
| | 286-098-354 | Diaphragm | 2 | | 722-090-110 | Seat, Check Ball | 4 |
| | 286-098-365 | Diaphragm | 2 | | 722-090-150 | Seat, Check Ball | 4 |
| 18 | 360-093-360 | Gasket, Air Valve | 1 | | | (seals required see item 27) | 4 |
| 19 | 360-114-360 | Gasket, Pilot Valve | 1 | 35 | 901-038-115 | 5/16 Flat Washer | 4 |
| 20 | 360-104-379 | Gasket, Air Inlet | 1 | | 901-038-330 | 5/16 Flat Washer | 4 |
| 21 | 360-105-360 | Gasket, Inner Chamber | 2 | 36 | 901-048-115 | 3/8 Flat Washer | 4 |
| 22 | 518-143-156 | Manifold, Suction | 1 | | 901-048-330 | 3/8 Flat Washer | 4 |
| | 518-143-156E | Manifold, Suction 3" BSP Tapered | 1 | | | (Stroke Indicator Only) | 4 |
| | 518-143-010 | Manifold, Suction | 1 | | | 3/8 Flat Washer | 4 |
| | 518-143-010E | Manifold, Suction 3" BSP Tapered | 1 | | | (Stroke Indicator Only) | 4 |
| | 518-143-110 | Manifold, Suction | 1 | 42 | ▲ 530-033-000 | Metal Muffler | 1 |
| | 518-143-110E | Manifold, Suction 3" BSP Tapered | 1 | | | | |

LEGEND:

○ = Items contained within Air End Kits

□ = Items contained within Wet End Kits

Note: Kits contain components specific to the material codes.



ATEX Compliant

Material Codes - The Last 3 Digits of Part Number

| | |
|--|--|
| 000.....Assembly, sub-assembly; and some purchased items | 364.....EPDM Rubber Color coded: BLUE |
| 010.....Cast Iron | 365.....Neoprene Rubber Color coded: GREEN |
| 015.....Ductile Iron | 366.....Food Grade Nitrile |
| 020.....Ferritic Malleable Iron | 368.....Food Grade EPDM |
| 080.....Carbon Steel, AISI B-1112 | 371.....Philthane (Tuftane) |
| 110.....Alloy Type 316 Stainless Steel | 374.....Carboxylated Nitrile |
| 111.....Alloy Type 316 Stainless Steel (Electro Polished) | 375.....Fluorinated Nitrile |
| 112.....Alloy C | 378.....High Density Polypropylene |
| 113.....Alloy Type 316 Stainless Steel (Hand Polished) | 379.....Conductive Nitrile |
| 114.....303 Stainless Steel | 408.....Cork and Neoprene |
| 115.....302/304 Stainless Steel | 425.....Compressed Fibre |
| 117.....440-C Stainless Steel (Martensitic) | 426.....Blue Gard |
| 120.....416 Stainless Steel (Wrought Martensitic) | 440.....Vegetable Fibre |
| 148.....Hardcoat Anodized Aluminum | 500.....Delrin® 500 |
| 150.....6061-T6 Aluminum | 502.....Conductive Acetal, ESD-800 |
| 152.....2024-T4 Aluminum (2023-T351) | 503.....Conductive Acetal, Glass-Filled |
| 155.....356-T6 Aluminum | 506.....Delrin® 150 |
| 156.....356-T6 Aluminum | 520.....Injection Molded PVDF Natural color |
| 157.....Die Cast Aluminum Alloy #380 | 540.....Nylon |
| 158.....Aluminum Alloy SR-319 | 542.....Nylon |
| 162.....Brass, Yellow, Screw Machine Stock | 544.....Nylon Injection Molded |
| 165.....Cast Bronze, 85-5-5-5 | 550.....Polyethylene |
| 166.....Bronze, SAE 660 | 551.....Glass Filled Polypropylene |
| 170.....Bronze, Bearing Type, Oil Impregnated | 552.....Unfilled Polypropylene |
| 180.....Copper Alloy | 555.....Polyvinyl Chloride |
| 305.....Carbon Steel, Black Epoxy Coated | 556.....Black Vinyl |
| 306.....Carbon Steel, Black PTFE Coated | 557.....Unfilled Conductive Polypropylene |
| 307.....Aluminum, Black Epoxy Coated | 558.....Conductive HDPE |
| 308.....Stainless Steel, Black PTFE Coated | 559.....Glass Filled - Conductive Polypropylene |
| 309.....Aluminum, Black PTFE Coated | 570.....Rulon II® |
| 313.....Aluminum, White Epoxy Coated | 580.....Ryton® |
| 330.....Zinc Plated Steel | 600.....PTFE (virgin material) Tetrafluorocarbon (TFE) |
| 332.....Aluminum, Electroless Nickel Plated | 603.....Blue Gylon® |
| 333.....Carbon Steel, Electroless Nickel Plated | 604.....PTFE |
| 335.....Galvanized Steel | 606.....PTFE |
| 337.....Silver Plated Steel | 607.....Envelon |
| 351.....Food Grade Santoprene® | 608.....Conductive PTFE |
| 353.....Geolast; Color: Black | 610.....PTFE Encapsulated Silicon |
| 354.....Injection Molded #203-40 Santoprene® Duro 40D +/-5; Color: RED | 611.....PTFE Encapsulated FKM |
| 356.....Hytrel® | 632.....Neoprene/Hytrel® |
| 357.....Injection Molded Polyurethane | 633.....FKM/PTFE |
| 358.....Urethane Rubber (Some Applications) (Compression Mold) | 634.....EPDM/PTFE |
| 359.....Urethane Rubber | 635.....Neoprene/PTFE |
| 360.....Nitrile Rubber Color coded: RED | 637.....PTFE, FKM/PTFE |
| 363.....FKM (Fluorocarbon) Color coded: YELLOW | 638.....PTFE, Hytrel®/PTFE |
| | 639.....Nitrile/TFE |
| | 643.....Santoprene®/EPDM |
| | 644.....Santoprene®/PTFE |
| | 656.....Santoprene® Diaphragm and Check Balls/EPDM Seats |
| | 661.....EPDM/Santoprene® |
| | 666.....FDA Nitrile Diaphragm, PTFE Overlay, Balls, and Seals |
| | 668.....PTFE, FDA Santoprene®/PTFE |


- Delrin and Hytrel are registered tradenames of E.I. DuPont.
- Nylatron is a registered tradename of Polymer Corp.
- Gylon is a registered tradename of Garlock, Inc.
- Santoprene is a registered tradename of Exxon Mobil Corp.
- Rulon II is a registered tradename of Dixon Industries Corp.
- Ryton is a registered tradename of Phillips Chemical Co.
- Valox is a registered tradename of General Electric Co.

RECYCLING

Many components of SANDPIPER® AODD pumps are made of recyclable materials. We encourage pump users to recycle worn out parts and pumps whenever possible, after any hazardous pumped fluids are thoroughly flushed.

Air Distribution Valve Assembly

(Use with Aluminum Centers ONLY)

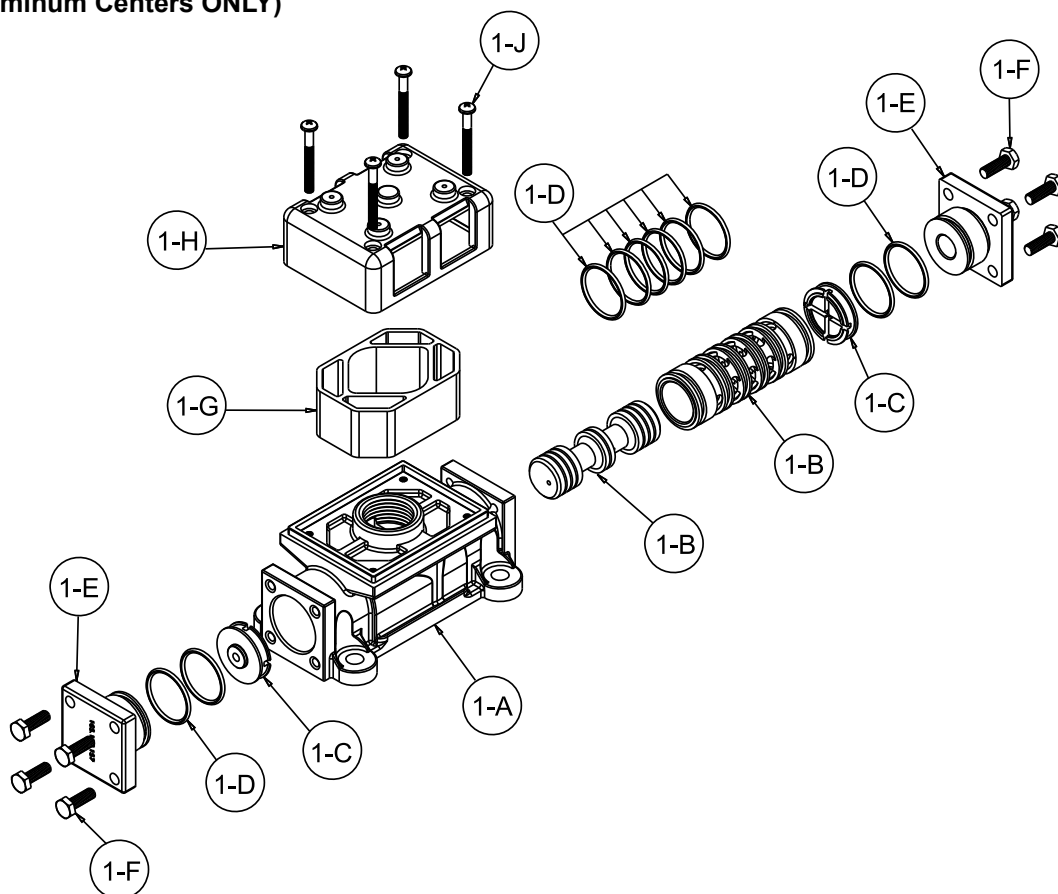

Air Distribution Valve Servicing

See repair parts drawing, remove screws.

Step 1: Remove Hex Head Cap Screws (1-F).

Step 2: Remove end cap (1-E).

Step 3: Remove spool part of (1-B) (caution: do not scratch).

Step 4: Press sleeve (1-B) from body (1-A).

Step 5: Inspect O-Ring (1-D) and replace if necessary.

Step 6: Lightly lubricate O-Rings (1-D) on sleeve (1-B).

Step 7: Press sleeve (1-B) into body (1-A).

Step 8: Reassemble in reverse order, starting with step 3.

Note: Sleeve and spool (1-B) set is match ground to a specified clearance sleeve and spools (1-B) cannot be interchanged.

Air Valve Assembly Parts List

| Item | Part Number | Description | Qty |
|------|-------------|----------------------|-----|
| 1 | 031-173-000 | Air Valve Assembly | 1 |
| 1-A | 095-109-157 | Body, Air Valve | 1 |
| 1-B | 031-139-000 | Sleeve and Spool Set | 1 |
| 1-C | 132-029-357 | Bumper | 2 |
| 1-D | 560-020-360 | O-Ring | 10 |
| 1-E | 165-127-157 | Cap, End | 2 |
| 1-F | 170-032-330 | Hex Head Capscrew | 8 |
| 1-G | 530-028-550 | Muffler | 1 |
| 1-H | 165-096-551 | Muffler Cap | 1 |
| 1-J | 706-026-330 | Machine Screw | 4 |

**Air Valve Assembly Parts List

| | | | |
|--|-------------|--------------------|---|
| 1 | 031-173-001 | Air Valve Assembly | 1 |
| Consists of all components above except: | | | |
| 1-F | 170-032-115 | Hex Head Capscrew | 8 |
| | | 1/4-20 x .75 | |
| 1-J | 706-026-115 | Machine Screw | 4 |


****Note:** Pumps equipped with this valve assembly are not ATEX compliant

IMPORTANT



Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

Air Distribution Valve Assembly

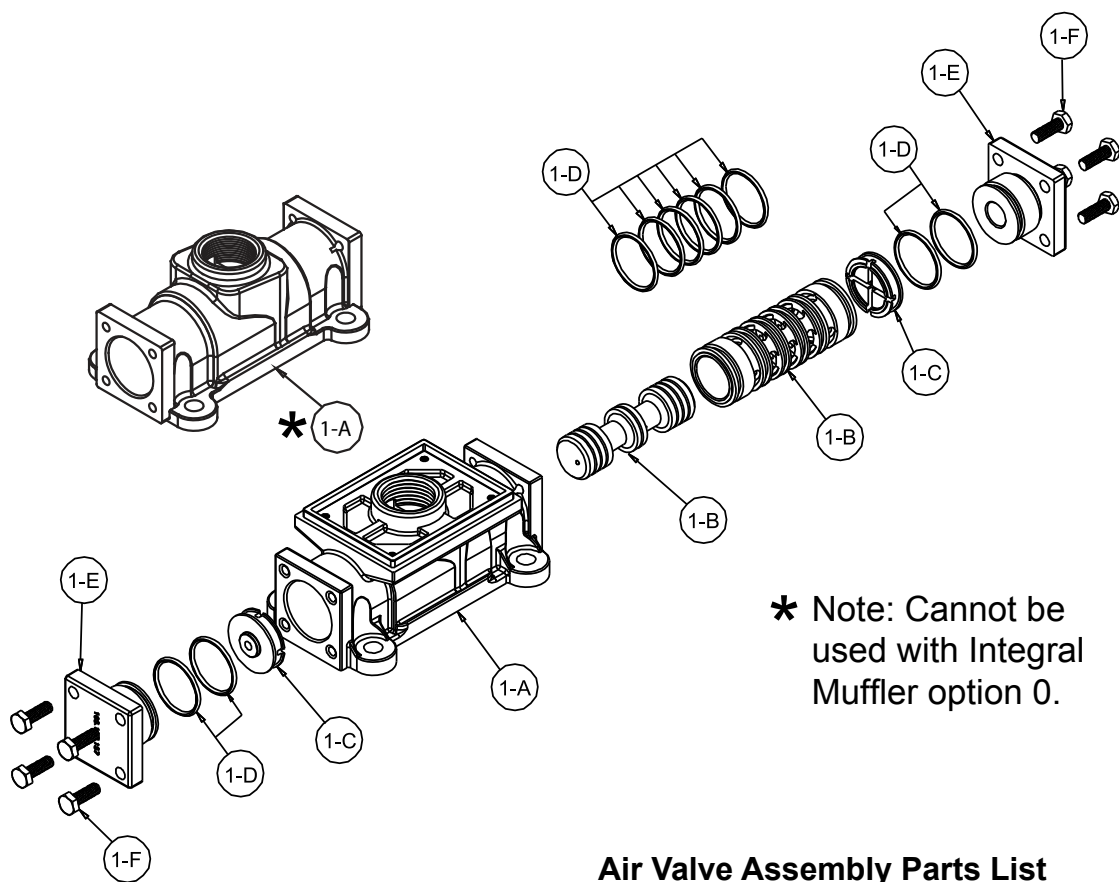

* Note: Cannot be used with Integral Muffler option 0.

Air Distribution Valve Servicing

See repair parts drawing, remove screws.

Step 1: Remove Hex Head Cap Screws (1-F).

Step 2: Remove end cap (1-E).

Step 3: Remove spool part of (1-B) (caution: do not scratch).

Step 4: Press sleeve (1-B) from body (1-A).

Step 5: Inspect O-Ring (1-D) and replace if necessary.

Step 6: Lightly lubricate O-Rings (1-D) on sleeve (1-B).

Step 7: Press sleeve (1-B) into body (1-A).

Step 8: Reassemble in reverse order, starting with step 3.

Note: Sleeve and spool (1-B) set is match ground to a specified clearance sleeve and spools (1-B) cannot be interchanged.

Air Valve Assembly Parts List

(Use w/Aluminum centers only)

| Item | Part Number | Description | Qty |
|------|-------------|--------------------------------|-----|
| 1 | 031-183-000 | Air Valve Assembly | 1 |
| 1-A | 095-109-157 | Body, Air Valve | 1 |
| 1-B | 031-139-000 | Sleeve and Spool Set | 1 |
| 1-C | 132-029-357 | Bumper | 2 |
| 1-D | 560-020-360 | O-Ring | 10 |
| 1-E | 165-127-157 | Cap, End | 2 |
| 1-F | 170-032-330 | Hex Head Capscrew 1/4-20 x .75 | 8 |

Air Valve Assembly Parts List

| | | | |
|--|-------------|--------------------------------|---|
| 1 | 031-183-001 | Air Valve Assembly | 1 |
| Consists of all components above except: | | | |
| 1-F | 170-032-115 | Hex Head Capscrew 1/4-20 x .75 | 8 |

Air Valve Assembly Parts List

(Use w/Cast Iron and Stainless Steel centers)

| Item | Part Number | Description | Qty |
|------|---------------|--------------------------------|-----|
| 1 | 031-179-000 | Air Valve Assembly | 1 |
| 1-A | 095-109-110 * | Body, Air Valve | 1 |
| 1-B | 031-139-000 | Sleeve and Spool Set | 1 |
| 1-C | 132-029-357 | Bumper | 2 |
| 1-D | 560-020-360 | O-Ring | 10 |
| 1-E | 165-127-110 | Cap, End | 2 |
| 1-F | 170-032-115 | Hex Head Capscrew 1/4-20 x .75 | 8 |

IMPORTANT




Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.



ATEX Compliant

Air Distribution Valve Assembly

(For NON-ATEX Cast Iron Centers)

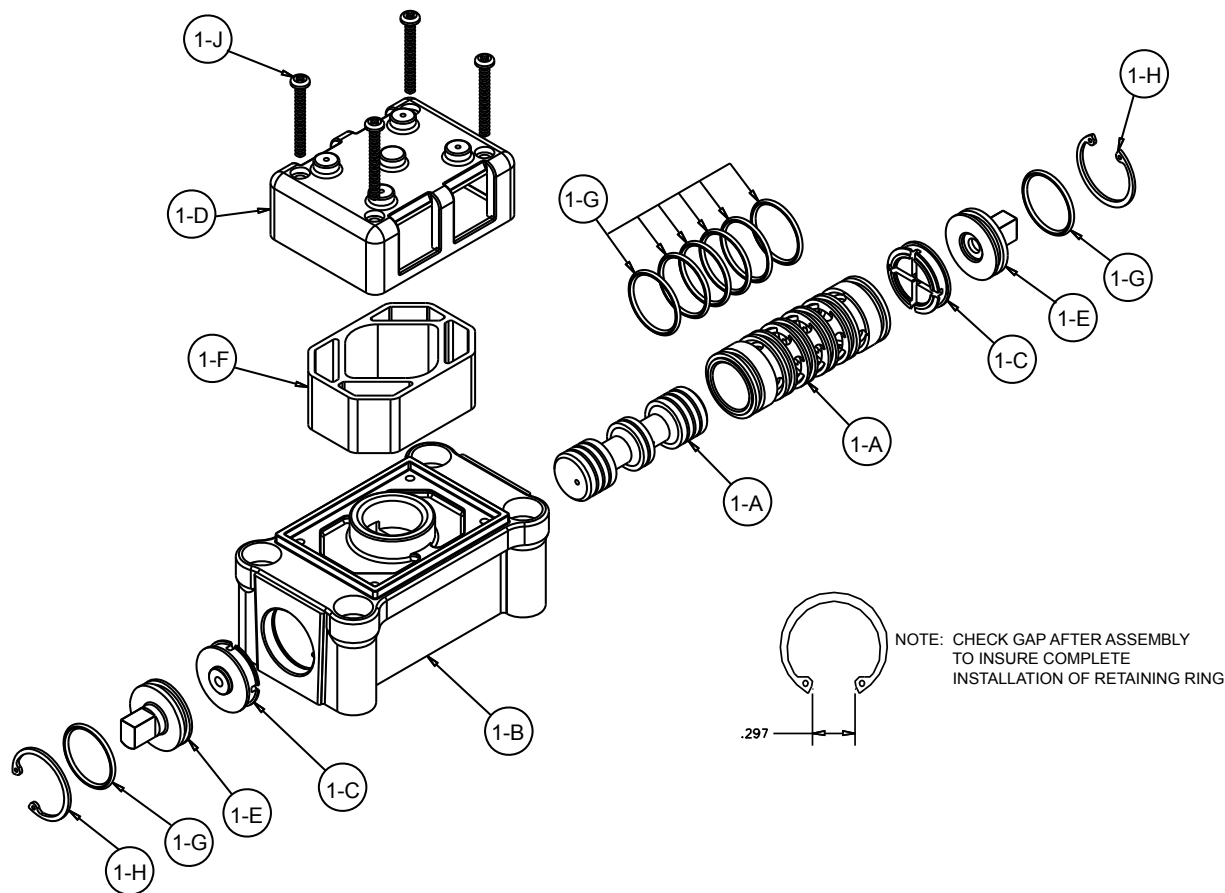

Air Distribution Valve Servicing

See repair parts drawing, remove screws.

Step 1: Remove end cap retainer (1-H).

Step 2: Remove end cap (1-E).

Step 3: Remove spool part of (1-A) (caution: do not scratch).

Step 4: Press sleeve (1-A) from body (1-B).

Step 5: Inspect O-Ring (1-H) and replace if necessary.

Step 6: Lightly lubricate O-Rings (1-H) on sleeve (1-A).

Step 7: Press sleeve (1-A) into body (1-B).

Step 8: Reassemble in reverse order, starting with step 3.

Note: Sleeve and spool (1-A) set is match ground to a specified clearance sleeve and spools (1-A) cannot be interchanged.

Air Valve Assembly Parts List

| Item | Part Number | Description | Qty |
|------|-------------|----------------------|-----|
| 1 | 031-140-000 | Air Valve Assembly | 1 |
| 1-A | 031-139-000 | Sleeve and Spool Set | 1 |
| 1-B | 095-094-551 | Body, Air Valve | 1 |
| 1-C | 132-029-552 | Bumper | 2 |
| 1-D | 165-096-551 | Cap, Muffler | 1 |
| 1-E | 165-115-558 | Cap, End | 2 |
| 1-F | 530-028-550 | Muffler | 1 |
| 1-G | 560-020-360 | O-Ring | 8 |
| 1-H | 675-044-115 | Ring, Retaining | 2 |
| 1-J | 710-015-115 | Screw, Self-tapping | 4 |

For Pumps with Alternate Mesh, Sound Dampening Mufflers or Piped Exhaust:


| | | | |
|---|-------------|--------------------|---|
| 1 | 031-141-000 | Air Valve Assembly | 1 |
| (Includes all items used on 031-140-000 minus items 1-D, 1-F & 1-J) | | | |

IMPORTANT



Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

Air Valve with Stroke Indicator Assembly

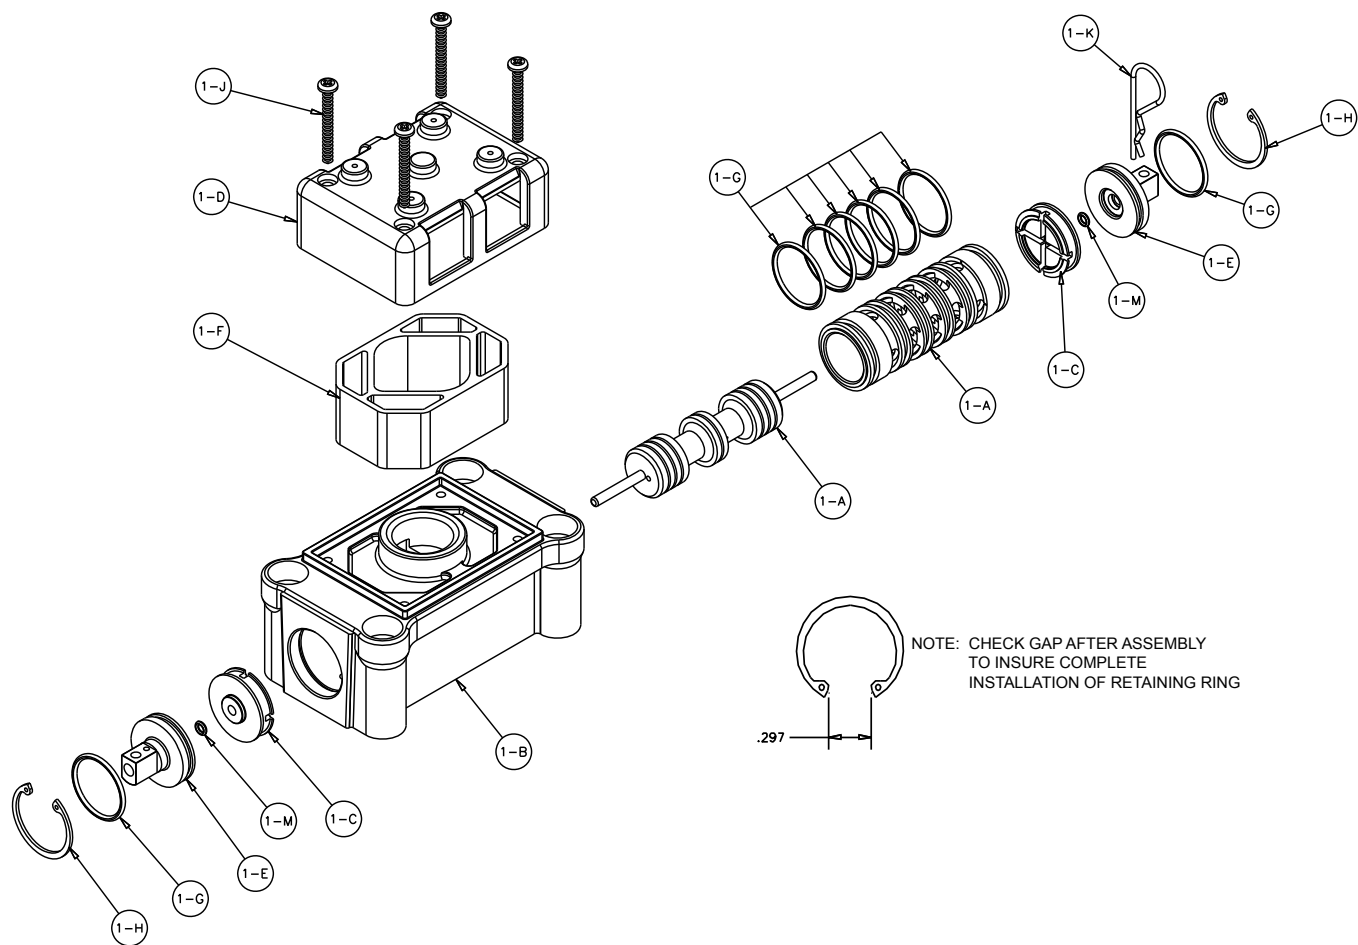

Air Distribution Valve Servicing

See repair parts drawing, remove screws.

Step 1: Remove end cap retainer (1-F).

Step 2: Remove end cap (1-E), bumper (1-C).

Step 3: Remove spool part of (1-A) (caution, do not scratch).

Step 4: Press sleeve (1-A) from body (1-B).

Step 5: Inspect O-Ring (1-G) and replace if necessary.


Step 6: Lightly lubricate O-Rings (1-G) on spool (1-A).

Step 7: Press sleeve (1-A) into body (1-B).


Step 8: Reassemble in reverse order.

Note: Sleeve and spool (1-A) set is match ground to a specified clearance sleeve and spools (1-A) cannot be interchanged.

Air Valve Assembly Parts List


| Item | Part Number | Description | Qty |
|---|-------------|---------------------------|----------|
|  1 | 031-146-000 | Air Valve Assembly | 1 |
| 1-A | 031-143-000 | Sleeve and Spool Set | 1 |
| 1-B | 095-094-559 | Body, Air Valve | 1 |
| 1-C | 132-029-552 | Bumper | 2 |
| 1-D | 165-096-559 | Cap, Muffer | 1 |
| 1-E | 165-098-147 | Cap, End | 2 |
| 1-F | 530-028-550 | Muffer | 1 |
| 1-G | 560-020-360 | O-Ring | 8 |
| 1-H | 675-044-115 | Ring, Retaining | 2 |
| 1-J | 710-015-115 | Screw, Self Tapping | 4 |
| 1-K | 210-008-330 | Clip, Safety | 1 |
| 1-M | 560-029-360 | O-Ring | 2 |

For Pumps with Alternate Mesh, Sound Dampening Mufflers or Piped Exhaust:

| | | | |
|---|-------------|--------------------|---|
|  1 | 031-147-000 | Air Valve Assembly | 1 |
| (includes all items on 031-146-000 minus 1-D, 1-F, & 1-J). | | | |

 **ATEX Compliant**

Pilot Valve Assembly

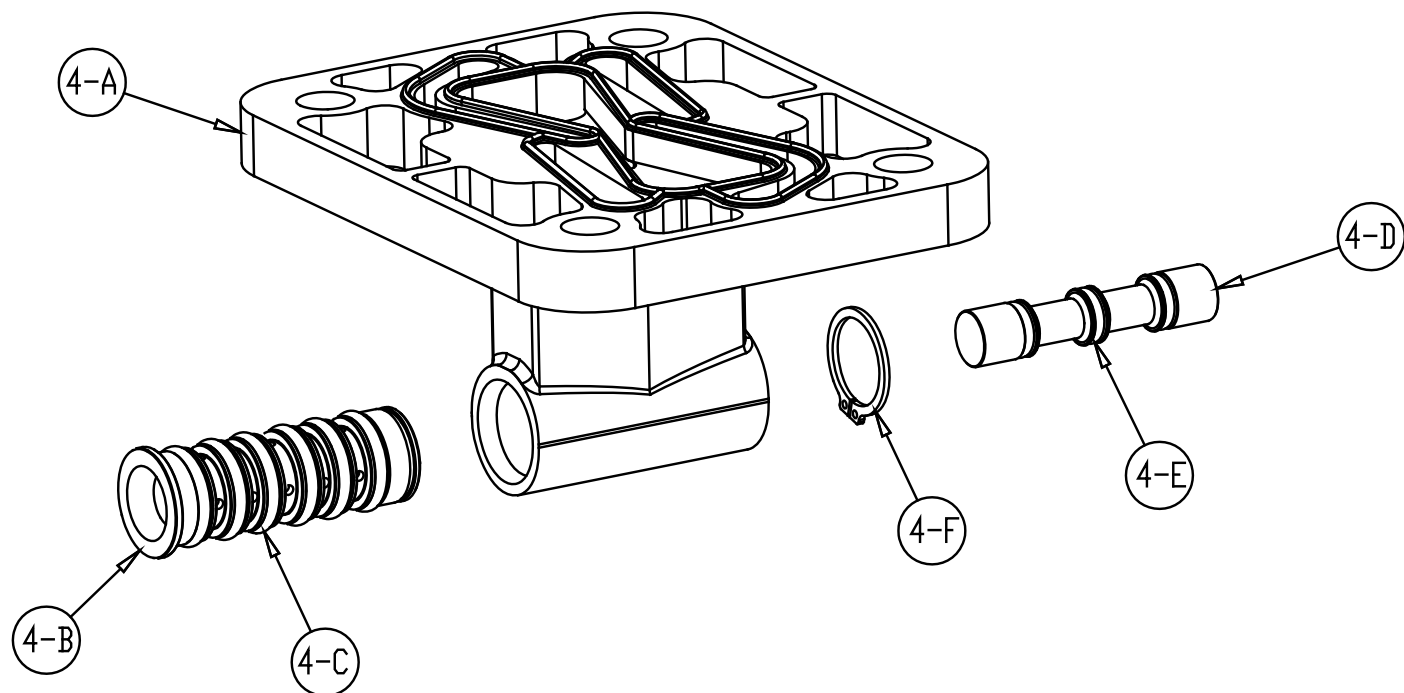

Pilot Valve Servicing

With Pilot Valve removed from pump.

- Step 1:** Remove snap ring (4-F).
- Step 2:** Remove sleeve (4-B), inspect O-Rings (4-C), replace if required.
- Step 3:** Remove spool (4-D) from sleeve (4-B), inspect O-Rings (4-E), replace if required.
- Step 4:** Lightly lubricate O-Rings (4-C) and (4-E).

Reassemble in reverse order.

Pilot Valve Assembly Parts List

| Item | Part Number | Description | Qty |
|------|-------------|-----------------------|-----|
| 4 | 095-110-000 | Pilot Valve Assembly | 1 |
| 4-A | 095-095-157 | Valve Body | 1 |
| 4-B | 755-052-000 | Sleeve (With O-Rings) | 1 |
| 4-C | 560-033-360 | O-Ring (Sleeve) | 6 |
| 4-D | 775-055-000 | Spool (With O-Rings) | 1 |
| 4-E | 560-023-360 | O-Ring (Spool) | 3 |
| 4-F | 675-037-080 | Retaining Ring | 1 |

For Pumps with Cast Iron Center Section

| Item | Part Number | Description | Qty |
|------|-------------|----------------------|-----|
| 4 | 095-110-558 | Pilot Valve Assembly | 1 |
| 4-A | 095-095-558 | Valve Body | 1 |


(includes all other items used on 095-110-000)

For Pumps with Stainless Steel Center Section

| Item | Part Number | Description | Qty |
|------|-------------|----------------------|-----|
| 4 | 095-110-110 | Pilot Valve Assembly | 1 |
| 4-A | 095-095-110 | Valve Body | 1 |

(includes all other items used on 095-110-000)

Intermediate Assembly Drawing

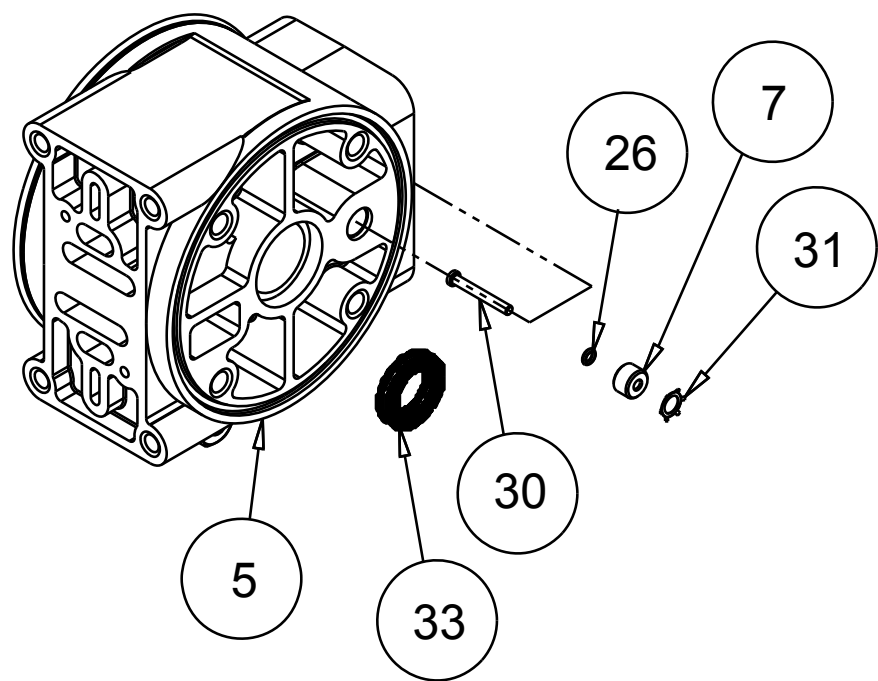

Intermediate Assembly Drawing

- Step 1:** Remove plunger, actuator (30) from center of intermediate pilot valve cavity.
- Step 2:** Remove Ring, Retaining (31), discard.
- Step 3:** Remove bushing, plunger (7), inspect for wear and replace if necessary with genuine parts.
- Step 4:** Remove O-Ring (22), inspect for wear and replace if necessary with genuine parts.
- Step 5:** Lightly lubricate O-Ring (22) and insert into intermediate.
- Step 6:** Reassemble in reverse order.
- Step 7:** Remove Seal, Diaphragm Rod (33).
- Step 8:** Clean seal area, lightly lubricate and install new Seal, Diaphragm Rod (33).

Intermediate Repair Parts List

| Item | Part Number | Description | Qty |
|------|-------------|-----------------------|-----|
| 5 | 114.024.157 | Bracket, Intermediate | 1 |
| | 114.024.010 | Bracket, Intermediate | 1 |
| | 114.024.110 | Bracket, Intermediate | 1 |
| 7 | 135.034.506 | Bushing, Plunger | 2 |
| 26 | 560.001.360 | O-Ring | 2 |
| 30 | 620.020.115 | Plunger, Actuator | 2 |
| 31 | 675.042.115 | Ring, Retaining* | 2 |
| 33 | 720.004.360 | Seal, Diaphragm Rod | 2 |


***Note:** It is recommended that when plunger components are serviced, new retaining rings be installed.

IMPORTANT




When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills. In the event of a diaphragm failure a complete rebuild of the center section is recommended.

Diaphragm Service Drawing, with Overlay

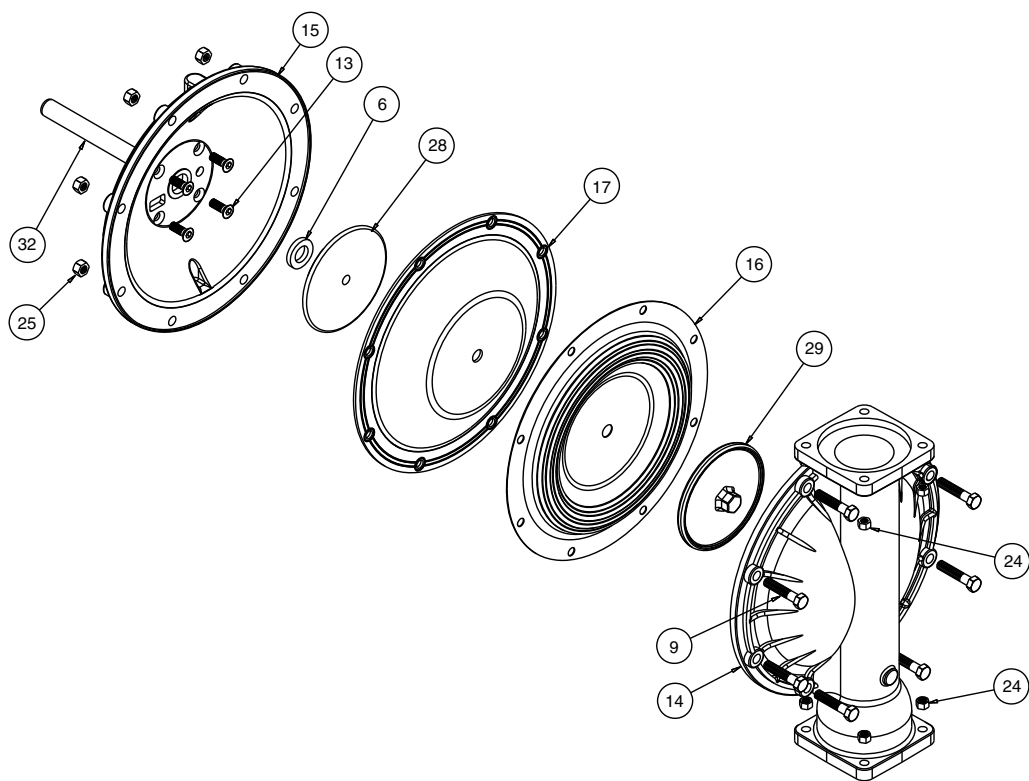

Diaphragm Service Drawing, Non-Overlay

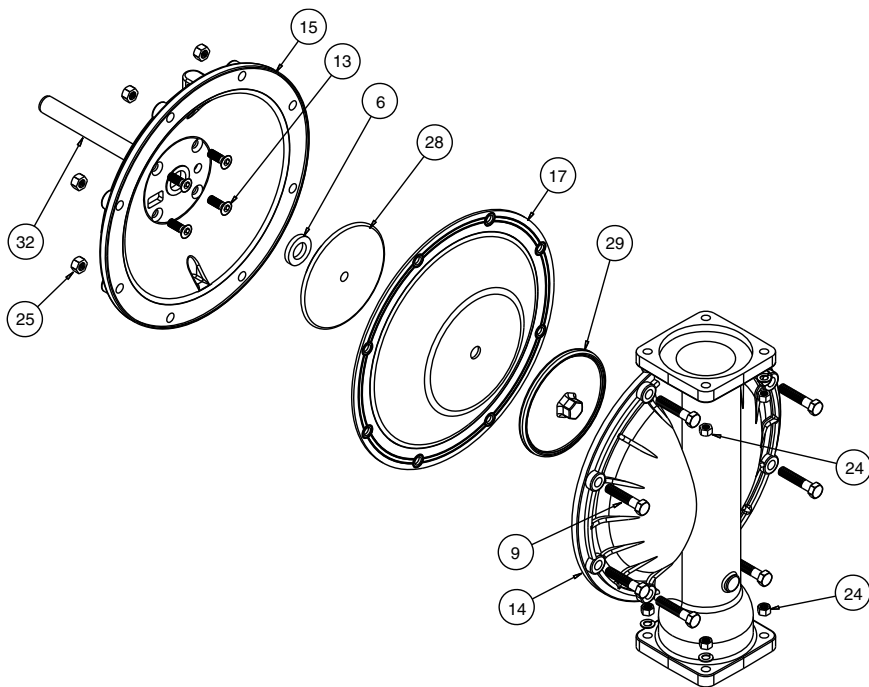

5: WET END

Diaphragm Servicing

Step 1: With manifolds and outer chambers removed, remove diaphragm assemblies from diaphragm rod. **DO NOT** use a pipe wrench or similar tool to remove assembly from rod. Flaws in the rod surface may damage bearings and seal. Soft jaws in a vise are recommended to prevent diaphragm rod damage.

Step 1.A: NOTE: Not all inner diaphragm plates are threaded. Some models utilize a through hole in the inner diaphragm plate. If required to separate diaphragm assembly, place assembly in a vise, gripping on the exterior cast diameter of the inner plate. Turn the outer plate clockwise to separate the assembly.

Always inspect diaphragms for wear cracks or chemical attack. Inspect inner and outer plates for deformities, rust scale and wear. Inspect intermediate bearings for elongation and wear. Inspect diaphragm rod for wear or marks.

Clean or repair if appropriate. Replace as required.

Step 2: Reassembly: There are two different types of diaphragm plate assemblies utilized throughout the Sandpiper product line: Outer plate with a threaded stud, diaphragm, and a threaded inner plate.

Outer plate with a threaded stud, diaphragm, and an inner plate with through hole. Secure threaded inner plate in a vise. Ensure that the plates are being installed with the outer radius against the diaphragm.

Step 3: Lightly lubricate, with a compatible material, the inner faces of both outer and inner diaphragm plates when using on non Overlay diaphragms (For EPDM water is recommended). No lubrication is required.

Step 4: Push the threaded outer diaphragm plate through the center hole of the diaphragm.

Note: Most diaphragms are installed with the natural bulge out towards the fluid side. S05, S07, and S10 non-metallic units are installed with the natural bulge in towards the air side.

Step 5: Thread or place, outer plate stud into the inner plate. For threaded inner plates, use a torque wrench to tighten the assembly together. Torque values are called out on the exploded view.

Repeat procedure for second side assembly. Allow a minimum of 15 minutes to elapse after torquing, then re-torque the assembly to compensate for stress relaxation in the clamped assembly.

Step 6: Thread one assembly onto the diaphragm rod with sealing washer (when used) and bumper.

Step 7: Install diaphragm rod assembly into pump and secure by installing the outer chamber in place and tightening the capscrews.

Step 8: On opposite side of pump, thread the remaining assembly onto the diaphragm rod. Using a torque wrench, tighten the assembly to the diaphragm rod. Align diaphragm through bolt holes, always going forward past the recommended torque. Torque values are called out on the exploded view. **NEVER** reverse to align holes, if alignment cannot be achieved without damage to diaphragm, loosen complete assemblies, rotate diaphragm and reassemble as described above.


Step 9: Complete assembly of entire unit.

IMPORTANT



Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

Solenoid Shifted Air Valve

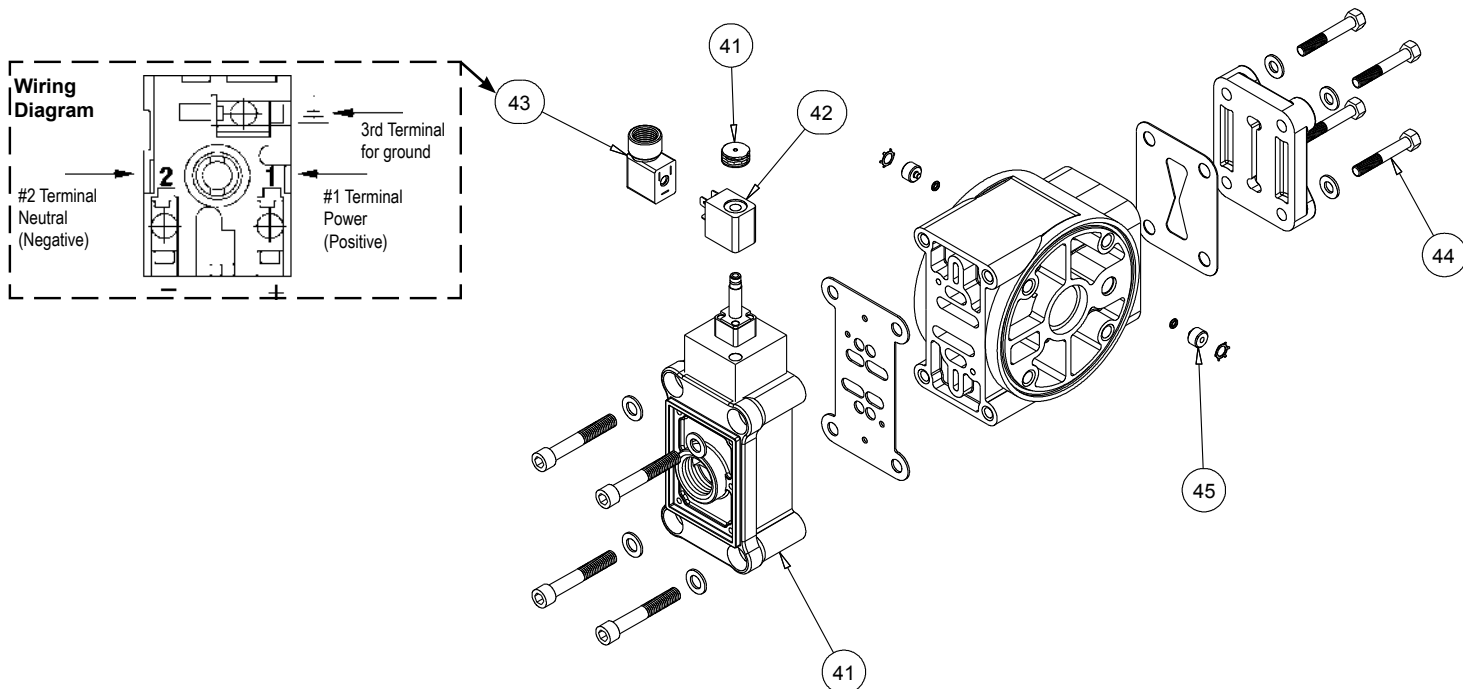

Solenoid Shifted Air Valve Parts List

(Includes all items used on Composite Repair Parts List except as shown)

| Item | Part Number | Description | Qty |
|------|-------------|--|-----|
| 41 | 893-097-000 | Solenoid Valve, NEMA4 1 | |
| 42 | 219-001-000 | Solenoid Coil, 24VDC | 1 |
| | 219-004-000 | Solenoid Coil, 24VAC/12VDC | 1 |
| | 219-002-000 | Solenoid Coil, 120VAC | 1 |
| | 219-003-000 | Solenoid Coil, 240VAC | 1 |
| 43 | 241-001-000 | Connector, conduit | 1 |
| | 241-003-000 | Conduit Connector with Suppression Diode (DC Only) | 1 |
| 44 | 170-029-330 | Capscrew, Hex HD 5/16-18 x 1.25 | 4 |
| 45 | 618-051-150 | Plug | 2 |



IEC EEx m T4



For Explosion Proof Solenoid Coils used in North America and outside the European Union.

| | | | |
|----|-------------|-----------------------------|---|
| 42 | 219-009-001 | Solenoid Coil, 120VAC 60 Hz | 1 |
| | 219-009-002 | Solenoid Coil, 240VAC 60 Hz | 1 |
| | 219-009-003 | Solenoid Coil, 12VDC | 1 |
| | 219-009-004 | Solenoid Coil, 24VDC | 1 |
| | 219-009-005 | Solenoid Coil, 110VAC 50 Hz | 1 |
| | 219-009-006 | Solenoid Coil, 230VAC 50 Hz | 1 |

Note: Item 43 (Conduit Connector) is not required



II 2G EEx m c II T5
II 2D c IP65 T100°C



For ATEX Compliant Solenoid Coils used in the European Union

| | | |
|-------------|--|---|
| 219-011-001 | Solenoid Coil, Single mounting 12 VDC, 3.3W / 267mA | 1 |
| 219-011-002 | Solenoid Coil, Single mounting 24 VDC, 3.3W / 136mA | 1 |
| 219-011-003 | Solenoid Coil, Single mounting 110/120 VAC, 3.4W / 29mA | 1 |
| 219-011-004 | Solenoid Coil, Single mounting 220/240 VAC, 3.4W / 15mA | 1 |

Note: Item 35 (Conduit Connector) is not required

Compressed Air Temperature Range: Maximum Ambient Temperature to plus 50°C

Solenoid Shifted Operation

The Solenoid Shifted SANDPIPER has a solenoid operated, air distribution valve in place of the standard SANDPIPER's pilot operated, air distribution valve. Where a pilot valve is normally utilized to cycle the pump's air distribution valve, an electric solenoid is utilized. As the solenoid is powered, one of the pump's air chambers is pressurized while the other chamber is exhausted. When electric power is turned off, the solenoid shifts and the pressurized chamber is exhausted while the other chamber is pressurized. By alternately applying and removing power to the solenoid, the pump cycles much like a standard SANDPIPER pump, with one exception. This option provides a way to precisely control and monitor pump speed.

Before Installation

Before wiring the solenoid, make certain it is compatible with your system voltage.

*Special Conditions For Safe Use

A fuse corresponding to its rated current (max. $3 \cdot I_{rat}$ according IEC 60127-2-1) or a motor protecting switch with short-circuit and thermal instantaneous tripping (set to rated current) shall be connected in series to each solenoid as short circuit protection. For very low rated currents of the solenoid the fuse of lowest current value according to the indicated IEC standard will be sufficient. The fuse may be accommodated in the associated supply unit or shall be separately arranged. The rated voltage to the fuse shall be equal to or greater than the stated rated voltage of the magnet coil. The breakage capacity of the fuse-link shall be as high as or higher than the maximum expected short circuit current at the location of the installation (usually 1500 A). A maximum permissible ripple of 20% is valid for all magnets of direct-current design.

Written Warranty

5 - YEAR Limited Product Warranty

Quality System ISO 9001 Certified • Environmental Management Systems ISO 14001 Certified

Warren Rupp, Inc. ("Warren Rupp") warrants to the original end-use purchaser that no product sold by Warren Rupp that bears a Warren Rupp brand shall fail under normal use and service due to a defect in material or workmanship within five years from the date of shipment from Warren Rupp's factory. Warren Rupp brands include SANDPIPER®, MARATHON®, PortaPump®, SludgeMaster™ and Tranquilizer®.

~ See complete warranty at sandpiperpump.com/content/warranty-certifications ~

**WARREN
RUPP, INC.®**

Declaration of Conformity

**Manufacturer: Warren Rupp, Inc.®, 800 N. Main Street
Mansfield, Ohio, 44902 USA**

Certifies that Air-Operated Double Diaphragm Pump Series: HDB, HDF, M Non-Metallic, S Non-Metallic, M Metallic, S Metallic, T Series, G Series, U Series, EH and SH High Pressure, RS Series, W Series, SMA and SPA Submersibles, and Tranquilizer® Surge Suppressors comply with the European Community Directive 2006/42/EC on Machinery, according to Annex VIII. This product has used Harmonized Standard EN809:1998+A1:2009, Pumps and Pump Units for Liquids - Common Safety Requirements, to verify conformance.

David Roseberry
Signature of authorized person

David Roseberry
Printed name of authorized person

October 20, 2005
Date of issue

Engineering Manager
Title

Revision Level: F

August 23, 2012
Date of revision



WARREN RUPP, INC.

EC Declaration of Conformity

In accordance with ATEX Directive 94/9/EC,
Equipment intended for use in potentially explosive environments.

Manufacturer:

Warren Rupp, Inc.®
A Unit of IDEX Corporation
800 North Main Street
P.O. Box 1568
Mansfield, OH 44902 USA

Applicable Standard:

EN13463-1: 2001
EN13463-5: 2003
EN60079-25: 2004

Harmonised Standard:

EN13463-1: 2009
EN13463-5: 2011
EN60079-25:2010

The harmonised standards have been compared to the applicable standards used for certification purposes and no changes in the state of the art technical knowledge apply to the listed equipment.

AODD Pumps and Surge Suppressors

Directive: 94/9/EC, Annex VIII
Technical File No.: 203104000-1410/MER

AODD (Air-Operated Double Diaphragm) Pumps

EC Type Examination Certificate No. Pumps: KEMA 09ATEX0071 X

DEKRA Certification B.V. (0344)
Meander 1051
6825 MJ Arnhem
The Netherlands

SANDPIPER®
A WARREN RUPP, INC. BRAND

Tranquilizer®

DATE/APPROVAL/TITLE:
2 July 2015

David Roseberry
David Roseberry, Director of Engineering

IDEX
FLUID & METERING